Linear Guide

1-1 Features of tbimotion Linear Guide	A02
1-2 The Procedure of Select Linear Guide	
1-3 Basic Load Rating and Service Life of Linear Guide	A06
1-4 Friction	A13
1-5 Working Load	A14
1-6 Safety Factor and Load	A20
1-7 Calculation of Average Working Load	A28
1-8 Calculation Example	
1-9 Accuracy	A40
1-10 Predicting the Rigidity	A42
1-11 Installation of Linear Guide	A44
1-12 Lubrication	
1-13 Precautions of Linear Guide	A57
2-1 The Types of TBI MOTION Linear Guide	A58
2-2 TRH / TRS / TRC International Standard Linear Guide	A59
2-2-3 TR-Series	
2-2-4 Nominal Model Code for Non-Interchangeable TR Type	
2-2-5 Nominal Model Code for Interchangeable TR Type	
TRH-V Series Specifications	
TRH-F Series Specifications TRS-V Series Specifications	
TRS-F /TRC-V Series Specifications	
2-3 The Standard Length and Maxima Length of Linear Rail	
2-4 Mounting Type of Linear Rail	
2-5 Accuracy Standard	
2-6 Determining the Magnitude of a Preload	
2-7 Mounting Location of Grease Nipples	
2-8 Grease Nipples	
2-9 Strong Dust-proof/Self-Lubricating Linear Guide Series Accessory	
2-10 Dust-proof/Accessory	
2-11 Friction	
2-12 Mounting-Surface Dimensional Tolerance	
3-1 TH Miniature Linear Guide	
4-1 TM Miniature Wide Linear Guide	
5-1 Accessory list / Accessory combination list	

1-1 Features of TBI MOTION Linear Guide

1-1-1 High Accuracy

Linear Guide has little friction, only a small driving force is needed to move the load. Low friction helps the temperature rising effect to stay low. Thus, the friction is decreased and the accuracy can be maintained for a long period than tradition slide system.

■ 1-1-2 High Rigidity

The design of Linear Guide features an equal load rating in all directions that provide sufficient rigidity load in all directions, self-aligning capability to absorb installation-error. Moreover, a sufficient preload can be achieved to increase rigidity and makes it suitable for any kind of installation.

■ 1-1-3 Easy for Maintenance

Compared with high-skill required scrapping process of traditional slide system, the Linear Guide can offer high precision even if the mounting surface is machined by milling or grinding. Moreover, the interchangeability of Linear Guide gives a convenience for installation and future maintenance.

■ 1-1-4 High Speed

Linear Guide block, rail and ball apply by contact point of rolling system. Due to the characteristic of low friction, the required driving force is much lower than that in other systems, thus the power consumption is low. Moreover the temperature rising effect is lower even under high speed operation.

■ 1-1-5 High Mechanical Efficiency without Clearance

Table 1.1.1

Drawing	Characteristics, Performance
	 Two trains of balls. In a Gothic-arch groove, each ball contacts the raceway at four points 45°- 45°. It has constant contact point between ball and arc groove. Rigidity has high stability. Two-row design is able to perform an equal load rating in four directions.
	 Four trains of balls. The circular-arc groove has two contact points at 45°- 45°(DF)-Four-Row Design features an equal load rating in all four directions with high rigidity. Four-row design is able to perform an equal load rating in four directions. Self-Aligning to absorb installation-error.
	 Four trains of balls. The circular-arc groove has two contact points at 45° - 45° (DB). Four-Row Design features an equal load rating in all four directions with high rigidity. Low friction promotes smooth operating condition.
	 Four trains of balls. In the Gothic-arch groove, each ball contacts the raceway at two points 45°- 45°, Light preload, two contact points, Heavy preload, four contact points. Compared with traditional DB type, it has higher rigidity.

1-1 Features of TBI MOTION Linear Guide

The Contract table of four-row design with equal load rating and two-row Gothic design.

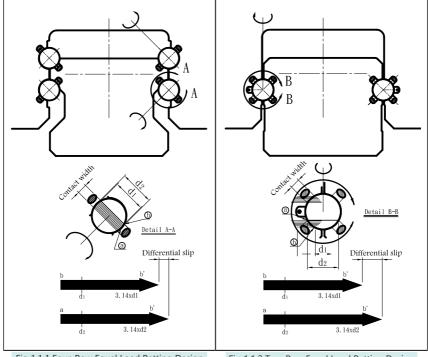


Fig 1.1.1 Four-Row Equal Load Ratting Design

Fig 1.1.2 Two-Row Equal Load Ratting Design

As shown in the diagram, the difference between inner surface circumference(πd_1)and outer surface circumference(πd_2)which is the contact point of ball, it is the slip that will occur while the ball rolling, this is called differential slip.. if the differential slip is larger, the ball will rotate while rolling, increasing the friction coefficient and friction resistance. Under the condition with preload and loading, due to the two point of contact the difference between d₁ and d₂ is little, the differential slip is little as well, the smoothness of rolling can be achieved and thus increase efficiency.

1-2 The Procedure of Select Linear Guide

1-2-1 Flowchart



1-3 Basic Load Rating and Service Life of Linear Guide

When determining a model that would suit your service conditions for a linear motion system, the load carrying capacity and service life of the model must be considered. To consider the load carrying capacity you should know the static safety factor of the model calculation based on the basic static load rating. Service life can be assessed by calculating the nominal life based on the basic dynamic load rating and checking to see if the obtained value meet your requirements.

The service life of a linear motion system refers to the total running distance that the linear motion system travels until flaking (the disintegration of a metal surface in scale-like pieces) occurs there to as a result of the rolling fatigue of the material caused by repeated stress on raceways and rolling elements.

Basic Load Rating : There are two basic load ratings for linear motion systems : basic static load rating (C_0), which sets the static permissible limits, and basic dynamic load rating (C).

■ 1-3-1 Basic Static Load Rating (C₀)

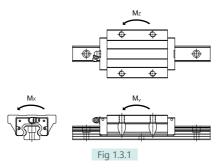
If a linear motion system, whether at rest or in low speed motion, receives an excessive load or a large impact, a partial permanent deformation develops between the raceway and rolling elements. If the magnitude of the permanent deformation exceeds a certain limit, it hinders the smoothness of the motion system.

The basic static load rating refers to a static load in a given direction with given magnitude such that the sum of the permanent set of the rolling elements and that of the raceway at the contact area under the most stress is 0.0001 times greater than the rolling element diameter.

In linear motion systems, the basic static load rating is defined as the radial load. Thus the basic static load rating provides a limit on the static permissible load.

■ 1-3-2 Basic Permissible Moment (M_x, M_y, M_z)

When a Linear Guide gets a force that makes the balls distorted to 1/10,000 of their diameter, we call the force as basic static permissible moment. Values of M_x, M_y, M_z are shown on Fig 1.3.1, which suggest 3 axis of moment on a Linear Guide slide.



■ 1-3-3 Static Safety Factor fs

A linear motion system may possibly receive an unpredictable external force due to vibration and impact while it is at rest or is moving or due to inertia resulting from start and stop. It is therefore necessary to consider the static safety factor against operating loads like these. The static safety factor (f_s) indicates the ratio of a linear motion system load carrying capacity **[** basic static load rating C_0] to the load exerted there on.

To calculate the applied load on Linear Guide, mean load and static safety factor must be obtained in advance. In the working environment with high intensity while start and stop, cantilever or cutting, a unexpected heavy load may occurs, therefore the maximum load must be acquired. Datum values of static safety factor are shown below;

Machine Used	Loading Conditions	fs lower limit
Ordinary Industrial	Receives no vibration or impact	1.0-1.3
Machine	Receives vibration and impact	2.0-3.0
Machine Tool	Receives no vibration or impact	1.0-1.5
Machine 1001	Receives vibration and impact	2.5-7.0

Table 1.3.1	Static Safety Factor fs
-------------	-------------------------

For large radial loads	$\frac{f_{\text{h}} \cdot f_{\text{t}} \cdot f_{\text{c}} \cdot C_{\text{0}}}{P_{\text{R}}} \geqq f_{\text{s}}$	f₅ : Static safety factor C₀ : Basic static-load rating (radial)	(kg)
For large reverse- radial loads	$\frac{f_{h} \cdot f_{t} \cdot f_{c} \cdot C_{0L}}{P_{L}} \geq f_{s}$	PL: Calculated load (reverse-radial)	(kg) (kg) (kg) (kg)
For large lateral loads	$\frac{f_{\text{h}} \cdot f_{\text{t}} \cdot f_{\text{c}} \cdot C_{\text{OT}}}{P_{\text{T}}} \geq f_{\text{S}}$	PT : Calculated load (lateral) fh : Hardness factor ft : Temperature factor fc : Contact factor	(kg) (Fig1.3.2) (Fig1.3.3) (Table1.3.2)

1-3 Basic Load Rating and Service Life of Linear Guide

■ 1-3-4 Service Life (L)

Even when identical linear guideways in a group are manufactured in the same way or applied under the same condition, the service life may be varied. Thus, the service life is used as an indicator for determining the service life of a linear guideway system. The nominal life (L) is defined as the total running distance that 90% of identical linear guideways in a group, when they are applied under the same conditions, can work without developing flaking.

■ 1-3-5 Basic Dynamic Load Rating (C)

Basic dynamic load rating (C) can be used to calculate the service life when linear guideway system response to a load. The basic dynamic load rating (C) is defined as a load in a given direction and with a given magnitude that when a group of linear guideways operate under the same conditions. As the rolling element is a ball, the nominal life of the linear guideway is 50 km. Moreover, as the rolling element is a roller, the nominal life is 100 km.

1-3-6 Calculation of Nominal Life

The service lives of linear motion system more or less various from system to system even if they are manufactured to the same specifications and remain in service under the same operating conditions. Hence, a guideline for determining the service life of a linear motion system is based on nominal life, which is defined as follows. The nominal life refers to the total running distance that 90% of identical linear motion systems in a group, when interlocked with one another under the same conditions, can achieve without developing flaking. The nominal life (L) of a linear motion system can be obtained from the basic dynamic load rating (C) and load imposed (Pc) using the following equations.

For a linear motion system with balls

For a linear motion system with rollers

$$L = \left(\frac{f_{h} \cdot f_{t} \cdot f_{c}}{f_{W}} \cdot \frac{C}{P_{c}} \right)^{3} \cdot 50$$
$$L = \left(\frac{f_{h} \cdot f_{t} \cdot f_{c}}{f_{W}} \cdot \frac{C}{P_{c}} \right)^{3} \cdot 100$$

A

Linear Guide

Service-Life Equation


The service life of the Linear Guide can be obtained using the following equation :

$$L = \left(\begin{array}{c} \frac{f_{h} \cdot f_{t} \cdot f_{c}}{f_{w}} \cdot \frac{C}{P_{c}} \end{array} \right)^{3} \cdot 50 \text{ km}$$

(total distance that can be traveled by at least 90% of a group of Linear Guide operated under the same conditions)

C : basic dynamic-load rat	ing (kg)
Pc: calculated load	(kg)
fh : hardness factor	(Fig 1.3.2)
ft : temperature factor	(Fig 1.3.3)
fc : contact factor	(Table 1.3.2)
fw : load factor(N)	(Table 1.3.3)

(Once nominal life (L) is obtained using this equation. The Linear Guide service life can be calculated by using the following equation if the stroke length and the number of reciprocating cycles are constant)



 L_h : service life in hours (h) ℓ_5 : stroke length (mm) N_1 : No. of reciprocating cycles per min (min⁻¹)

[fh : Hardness factor]

To ensure achievement of the optimum load-bearing capacity of the Linear Guide, the raceway hardness must be 58~64 HRC. At a hardness below this range, the basic dynamic and static-load ratings decrease. The ratings must therefore be multiplied by the respective hardness factors (fh). As the Linear Guide has sufficient hardness, fh for the Linear Guide is 1.0 unless otherwise specified.


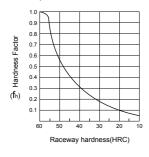


Fig 1.3.2 Hardness Factor (fh)

[ft: Temperature factor]

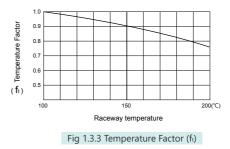For Linear Guide used at ambient temperatures over 100°C, a temperature factor corresponding to the ambient temperature, selected from the diagram below, must be taken into consideration. In addition, please note that selected Linear Guide itself must be a model with high-temperature specifications.



When used at ambient temperatures higher than 80°C, the seals, end caps, and ball cages used must be changed to those with hightemperature specifications.

1-3 Basic Load Rating and Service Life of Linear Guide

[fc: Contact factor]

When multiple Linear Guide blocks are laid by each other, moments and mounting-surface precision will affect operation, making it difficult to achieve uniform load distribution. For Linear Guide blocks used laid over one another, multiply the basic load rating (C), (Co) by a contact factor selected from the table below.

Table 1.3.2 Contact factor (fc)

No. of Blocks Used	Contact Factor (f _c)
In normal use	1
2	0.81
3	0.72
4	0.66
5	0.61
6 or more	0.6

** When the non-uniform load distribution can be predicted, as in a large system, consider using a contact factor.

[f_w : Load factor]

In general, machines in reciprocal motion are likely to cause vibration and impact during operation, and it is particularly difficult to determine the magnitude of vibration that develops during high-speed operation as well as that of impact during repeated starting and stopping in normal use. Therefore, where the effects of speed and vibration are estimated to be significant divide the basic dynamic-load rating (C) by a load factor selected from the table below.

Vibration and Impact	Velocity (V)	fw	
Very Slight	Very Low V≤0.25 m/s	1~1.2	
Slight	Low 0.25 <v≤1 m="" s<="" td=""><td>1.2~1.5</td></v≤1>	1.2~1.5	
Moderate	Medium 1 <v≤2 m="" s<="" td=""><td>1.5~2</td></v≤2>	1.5~2	
Strong	High V>2 m/s	2~3.5	

Table 1.3.3 Load Factor (fw)

Calculation Examples :

Application : Machine Center Block model number : TRH30FE (Basic static load C_0 = 9004 kg, Basic dynamic load C = 4791 kg) The calculated load P_c = 266.5 kg The formula of calculating the life time by travel is

$$L = \left(\frac{f_{h} \cdot f_{t} \cdot f_{c}}{f_{w}} \cdot \frac{C}{Pc}\right)^{3} \cdot 50 \text{ km}$$

Since using only one block in this application, we take $f_c=1$ Supposed the speed is not very high between 0.25~1 m/s, so we take $f_w=1.5$ The temperature of working environment is under 100°C. The temperature factor $f_t=1$ The hardness of raceway is HRC 58~62, so the hardness $f_h=1$

With all above data, the life time by travel of this application L = 86,112 km

To calculate the life time by using hours :

We supposed the distance of travel Ls = 3000 mm

Times (Back and forth) per mins $N1 = 4 (min^{-1})$

The life time by travel is 86,112 km, the distance of travel is 3 m (3000 mm), so each back and forth is 6 m.

The total times of back and forth would be $86,112 \times 1000/6 = 14,352,000$ The life time by using minutes is 14,352,000/4 = 3,588,000 mins = 59,800 hours

■ 1-3-7 Service-Life Equation Lh

The Service Life can be calculated by operating term and velocity Nominal Life.

$$L_{h} = (\frac{L \cdot 10^{3}}{V_{e} \cdot 60}) = \frac{(\frac{C}{P})^{3} \cdot 50 \cdot 10^{3}}{V_{e} \cdot 60} \cdot hr$$

Lh : Service Life in Hour L : Nominal life (km)

Ve : Velocity (m/min) C/P : Load Ratio

Calculating Life Time

Formula (A) calculating hour

Lh : Lifetime (h) L : Nominal life (km) Ls : Distance of travel (mm) N1 : Times of travel per minute (min⁻¹)

$$L_{h} = \frac{L \cdot 10^{6}}{2 \cdot L_{s} \cdot N_{1} \cdot 60}$$

Formula (B) calculating year

Ly: Lifetime (year) L: Nominal life (km) Ls: Distance of travel (mm) N1: Times of travel per minute (min⁻¹) Mn: Minutes of running per day (min/hr) Hn: Hours of running per day (hr/day) Dn: Days of running per year (day/year)

$$L_{y} = \frac{L \cdot 10^{6}}{2 \cdot L_{s} \cdot N_{1} \cdot M_{n} \cdot H_{n} \cdot D_{n}}$$

Notes : The service life is verified by different environments and other usage conditions. Please confirm this information with the costumer. For environment factors, please refer to page A08~A10.

1-3 Basic Load Rating and Service Life of Linear Guide

Example 1 :

There is a working station using linear guides with a nominal life of 45000 km, how should we calculate its service life in hours.

Known :

 L_s : Distance of travel = 3000 mm (mm) N₁ : 4 times of travel per minute (min⁻¹)

 $L_{h} = \frac{L \cdot 10^{6}}{2 \cdot L_{s} \cdot N_{1} \cdot 60} = \frac{45000 \cdot 10^{6}}{2 \cdot 3000 \cdot 4 \cdot 60} = 31250 \text{ hr}$

Example 2 :

There is a working station using linear guides with a nominal life 71231.5 km, how should we calculate its service life in year.

Known :

Ls : Distance of travel = 4000 mm (mm)

N₁: 5 times of travel per minute (min⁻¹)

Ms : Running 60 mins per hour (min/hr)

Hs : Running 24 hours per day (hr/day)

Ds : Running 360 days per year (day/year)

$$L_{y} = \frac{L \cdot 10^{6}}{2 \cdot L_{s} \cdot N_{1} \cdot M_{s} \cdot H_{s} \cdot D_{s}} = \frac{71231.5 \cdot 10^{6}}{2 \cdot 4000 \cdot 5 \cdot 60 \cdot 24 \cdot 360} = 3.435 \text{ year}$$

1-4 Friction

The construction of Linear Guide are block, rail and motion system which has rolling elements, such as balls and rollers, placed between two raceways. The rolling motion that rolling elements give rise to reduce the frictional resistance to 1/20 th to 1/40 th of that in a slide guide. Static friction, in particular, is much lower in a linear motion system than in other system, and there is little difference between static and dynamic friction, so that stick-slip does not occur. Therefore, Linear Guide could apply in various precision motion system. Frictional resistance in a linear motion system varies with the type of linear motion system, the magnitude of the preload, the viscosity resistance of the lubricant used the load exerted on the system, and other factors. Table shows Friction of Linear Guide.

Type of Linear Motion System	Friction Coefficient
Linear Guide	0.002~0.003
Ball Spline	0.002~0.003
Linear Guide Roller	0.0050~0.010
Cross Roller Guide	0.0010~0.0025
Linear Ball Slide	0.0006~0.0012

1-5 Working Load

1-5-1 Working Load

The load applied to the Linear Guide, varies with the external force exerted thereon, such as the location of the center of gravity of an object been moved, the location of the thrust developed, inertia due to acceleration and deceleration during starting and stopping, and the machining resistance. To select the correct type of Linear Guide, the magnitude of applied loads must be determined in consideration of the above conditions to calculate accurate applied load.

To obtain the magnitude of an applied load and the service life in hours, the operating conditions of the Linear Guide system must first be set.

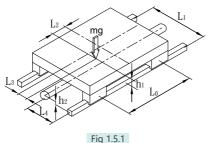
- (1) Mass : m (kg)
- (2) Direction of the action load
- (3) Location of the action point
 - (e.g., center of gravity) : L_2 , L_3 , h_1 (mm)
- (4) Location of the thrust developed : L₄, h₂ (mm)
- (5) Linear Guide system arrangement : L₀, L₁ (mm)
- (6) Velocity diagram Velocity : V (mm/s)

Time : tn (s)


Acceleration : an (mm/s²)

$$a_n = \left(\frac{\Delta V}{t_n}\right)$$

Gravitational acceleration $g = 9.8 \text{ m/s}^2$







- (8) Stroke length : L (mm)
- (9) Mean velocity : V_m (mm/s)
- (10) Required service life in hours : Lh (h)






Fig 1.5.2

Calculating the Working Load


The load applied to the Linear Guide varies with the external force exerted thereon, such as the location of the center of gravity of an object being moved, the location of the thrust developed, inertia due to acceleration and deceleration during starting and stopping, and the machining resistance. To select the correct type of Linear Guide, the magnitude of applied loads must be determined in consideration of the above conditions. Using the following Table 1.5.1, we will now calculate the loads applied to the Linear Guide.


m : Mass	(kg)	g : Gravitational accele	ration (m/s ²)
Ln : Distance	(mm)	$(g=9.8 \text{ m/s}^2)$	
Fn : External force	(kg)	V : Velocity	(m/s)
Pn : Applied load	(kg)	t _n : Time	(s)
(radial and reverse-radi	al directions)	an : Acceleration	(m/s ²)
Pnt : Applied load	(kg)	$ = \langle \Delta V \rangle $	
		$a_n = \left(\frac{\Delta V}{t_n} \right)$	

Table 1.5.1 Calculation Load

No.	Opearating Conditions	Equation for Calculating Applied Load
1	Install in a horizontal position. (Move the block) Measure in uniform motion or at rest.	$F_{1} = \frac{mg}{4} + \frac{mg \cdot L_{2}}{2 \cdot L_{0}} - \frac{mg \cdot L_{3}}{2 \cdot L_{1}}$ $F_{2} = \frac{mg}{4} - \frac{mg \cdot L_{2}}{2 \cdot L_{0}} - \frac{mg \cdot L_{3}}{2 \cdot L_{1}}$ $F_{3} = \frac{mg}{4} - \frac{mg \cdot L_{2}}{2 \cdot L_{0}} + \frac{mg \cdot L_{3}}{2 \cdot L_{1}}$ $F_{4} = \frac{mg}{4} + \frac{mg \cdot L_{2}}{2 \cdot L_{0}} + \frac{mg \cdot L_{3}}{2 \cdot L_{1}}$
2	Install in an overhung horizontal positon. (Move the block) Measure in uniform motion or at rest.	$F_{1} = \frac{mg}{4} + \frac{mg \cdot L_{2}}{2 \cdot L_{0}} + \frac{mg \cdot L_{3}}{2 \cdot L_{1}}$ $F_{2} = \frac{mg}{4} - \frac{mg \cdot L_{2}}{2 \cdot L_{0}} + \frac{mg \cdot L_{3}}{2 \cdot L_{1}}$ $F_{3} = \frac{mg}{4} - \frac{mg \cdot L_{2}}{2 \cdot L_{0}} - \frac{mg \cdot L_{3}}{2 \cdot L_{1}}$ $F_{4} = \frac{mg}{4} + \frac{mg \cdot L_{2}}{2 \cdot L_{0}} - \frac{mg \cdot L_{3}}{2 \cdot L_{1}}$

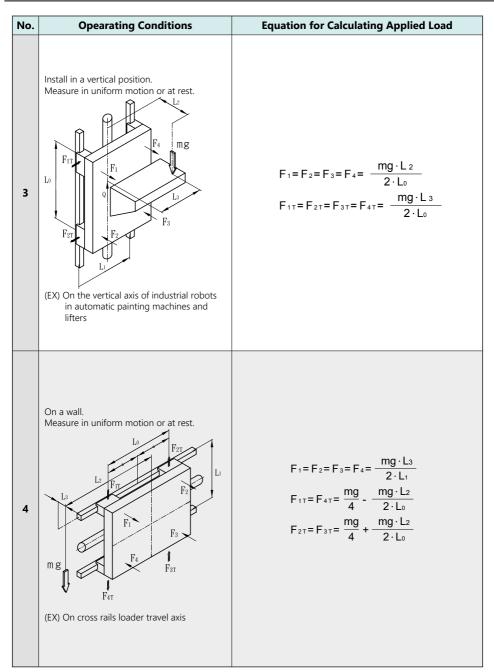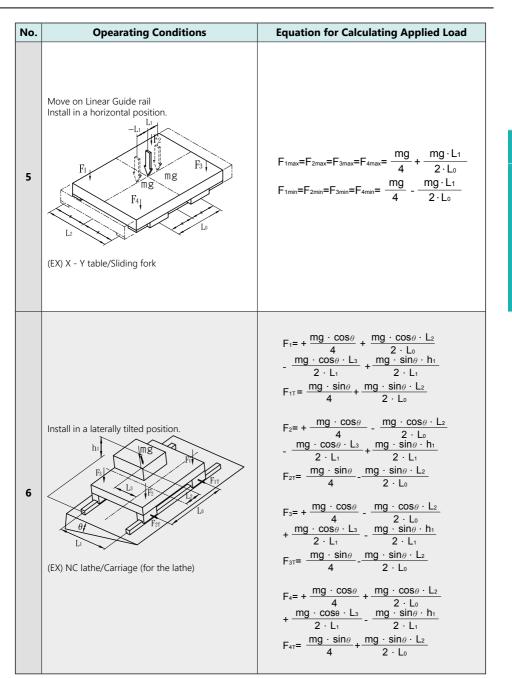1-5 Working Load






1-5 Working Load

Na	Operating Conditions	Equation for Colculation Applied Lond
No.	Opearating Conditions	Equation for Calculating Applied Load $F_{1} = + \frac{mg \cdot \cos \theta}{4} + \frac{mg \cdot \cos \theta \cdot L_{2}}{2 \cdot L_{0}}$ $- \frac{mg \cdot \cos \theta \cdot L_{3}}{2 \cdot L_{1}} + \frac{mg \cdot \sin \theta \cdot h_{1}}{2 \cdot L_{0}}$ $F_{1T} = + \frac{mg \cdot \sin \theta \cdot L_{3}}{2 \cdot L_{0}}$ $F_{2} = + \frac{mg \cdot \cos \theta}{4} - \frac{mg \cdot \cos \theta \cdot L_{2}}{2 \cdot L_{0}}$ $F_{2} = - \frac{mg \cdot \cos \theta + L_{3}}{2 \cdot L_{0}} - \frac{mg \cdot \cos \theta \cdot L_{2}}{2 \cdot L_{0}}$ $F_{3} = + \frac{mg \cdot \cos \theta}{4} - \frac{mg \cdot \cos \theta \cdot L_{2}}{2 \cdot L_{0}}$ $F_{3} = - \frac{mg \cdot \sin \theta + L_{3}}{2 \cdot L_{0}} - \frac{mg \cdot \cos \theta + L_{2}}{2 \cdot L_{0}}$ $F_{3T} = - \frac{mg \cdot \sin \theta + L_{3}}{2 \cdot L_{0}}$ $F_{3T} = - \frac{mg \cdot \sin \theta + L_{3}}{2 \cdot L_{0}}$
8	(EX) NC lathe/Tool res (for the lathe) Install in a horizontal position subjected to inertia. mg f_{1} F_{1} F_{1} F_{2} F_{2} $a_{n} = \frac{\Delta V}{t_{n}}$ (EX) Wagon Truck	$F_{4} = + \frac{mg \cdot \cos \theta}{4} + \frac{mg \cdot \cos \theta \cdot L_{2}}{2 \cdot L_{0}}$ $+ \frac{mg \cdot \cos \theta \cdot L_{3}}{2 \cdot L_{1}} + \frac{mg \cdot \sin \theta \cdot h_{1}}{2 \cdot L_{0}}$ $F_{4T} = + \frac{mg \cdot \sin \theta \cdot L_{3}}{2 \cdot L_{0}}$ $F_{4T} = + \frac{mg \cdot \sin \theta \cdot L_{3}}{2 \cdot L_{0}}$ $F_{2} = F_{3} = \frac{mg}{4} + \frac{mg \cdot a_{1} \cdot L_{2}}{2 \cdot L_{0} \cdot g}$ $F_{2} = F_{3} = \frac{mg}{4} + \frac{mg \cdot a_{1} \cdot L_{3}}{2 \cdot L_{0} \cdot g}$ $F_{1T} = F_{4T} = \frac{mg \cdot a_{1} \cdot L_{3}}{2 \cdot L_{0} \cdot g}$ $F_{2T} = F_{3T} = \frac{-mg \cdot a_{1} \cdot L_{3}}{2 \cdot L_{0} \cdot g}$ $F_{1} = F_{2} = F_{3} = F_{4} = \frac{mg}{4}$ $F_{1} = F_{4} = \frac{mg}{4} - \frac{mg \cdot a_{3} \cdot L_{2}}{2 \cdot L_{0} \cdot g}$ $F_{2} = F_{3} = \frac{mg}{4} + \frac{mg \cdot a_{3} \cdot L_{2}}{2 \cdot L_{0} \cdot g}$ $F_{2T} = F_{3T} = \frac{-mg \cdot a_{3} \cdot L_{3}}{2 \cdot L_{0} \cdot g}$ $F_{2T} = F_{3T} = \frac{-mg \cdot a_{3} \cdot L_{3}}{2 \cdot L_{0} \cdot g}$

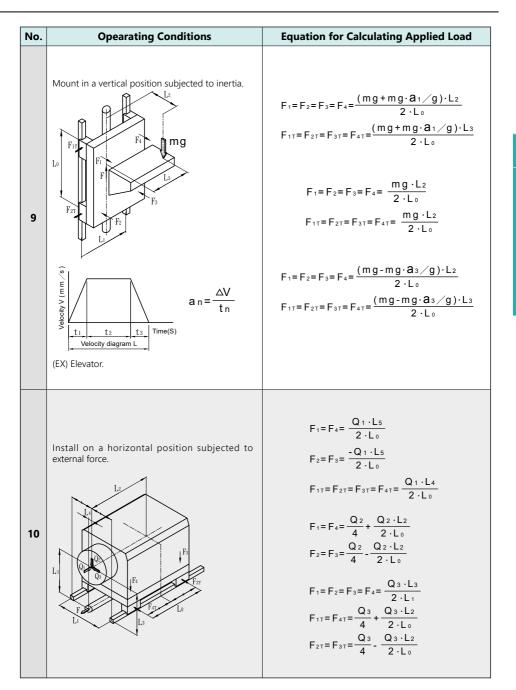
A Linear Guide



1-6 Safety Factor and Load

■ 1-6-1 Equivalent Factors of Linear Guide Block

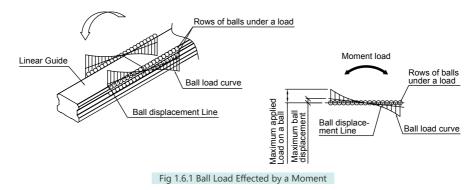Where a sufficient installation space is not available you may be obliged to use just one Linear Guide block or two Linear Guide blocks laid over one another for the Linear Guide. In such a setting, the load distribution cannot be uniform, as a result, an excessive load is exerted in localized areas (e.g., rail ends). Continued use under such conditions may result in flaking in those areas, consequently shortening the service life. In such a case, calculating true load by multiplying the moment value by any one of the moment-equivalent factors specified in Tables.




An equivalent-load equation applicable when a moment acts on a Linear Guides is shown below.

 $P=K \cdot M$

- P : Equivalent load per Linear Guide (kg)
- K : Equivalent moment factor
- M : Developed moment (kg-mm)
- Kx, Ky, Kz represent the equivalent moment factors in directions Mx, My, Mz respectively.

Calculation Examples

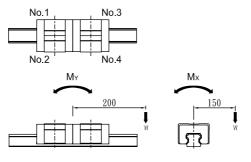Two Linear Guide blocks are used laid over one another. Model No : TRH30FE Gravitational Acceleration g = 9.8 m/s^2 Mass w = 5 kgMx = $5 \cdot 150 = 750 \text{ (kg-mm)}$ My = $5 \cdot 200 = 1000 \text{ (kg-mm)}$





$$P_{1} = K_{x} \cdot \frac{M_{x}}{2} + K_{y} \cdot M_{y} + \frac{W}{2} = 7.15 \cdot 10^{2} \cdot \frac{750}{2} + 1.3 \cdot 10^{2} \cdot 1000 + \frac{5}{2} = 42.3 \text{ (kgf)}$$

$$P_{2} = -K_{x} \cdot \frac{M_{x}}{2} + K_{y} \cdot M_{y} + \frac{W}{2} = -7.15 \cdot 10^{2} \cdot \frac{750}{2} + 1.3 \cdot 10^{2} \cdot 1000 + \frac{5}{2} = -11.3 \text{ (kgf)}$$

$$P_{3} = K_{x} \cdot \frac{M_{x}}{2} - K_{y} \cdot M_{y} + \frac{W}{2} = 7.15 \cdot 10^{2} \cdot \frac{750}{2} - 1.3 \cdot 10^{2} \cdot 1000 + \frac{5}{2} = 16.3 \text{ (kgf)}$$

$$P_{4} = -K_{x} \cdot \frac{M_{x}}{2} - K_{y} \cdot M_{y} + \frac{W}{2} = -7.15 \cdot 10^{2} \cdot \frac{750}{2} - 1.3 \cdot 10^{2} \cdot 1000 + \frac{5}{2} = -37.3 \text{ (kgf)}$$

XNote.1

Since a Linear Guide in a vertical position receives only a moment load, there is no need to apply other loads (w).

i Note.2 ≫

In some models, load ratings differ depending on the direction of the applied load. With such a model, calculate an equivalent load in a direction in which conditions are comparably bad.

1-6 Safety Factor and Load

Table 1.6.1 TRH-V

	Equivalent Factors K _y (mm ⁻¹)		Equivalent		
ModelNo.	Equivalent Load Calculation for a system Using One Linear Guide Block	Equivalent Load Calculation for a system Using Two Linear Guide Blocks laid Over One-Another	Equivalent Load Calculation for a system Using One Linear Guide Block	Equivalent Load Calculation for a system Using Two Linear Guide Blocks laid Over One-Another	Equivalent Factors K _* (mm ⁻¹)
TRH15VN	1.48×10 ⁻¹	3.11×10 ⁻²	1.48×10 ⁻¹	3.11×10 ⁻²	1.34×10 ⁻¹
TRH15VL	1.26×10 ⁻¹	2.70×10 ⁻²	1.26×10 ⁻¹	2.70×10 ⁻²	1.34×10 ⁻¹
TRH20VN	1.11×10 ⁻¹	2.35×10 ⁻²	1.11×10 ⁻¹	2.35×10 ⁻²	9.90×10 ⁻²
TRH20VE	8.00×10 ⁻²	1.78×10 ⁻²	8.00×10 ⁻²	1.78×10 ⁻²	9.90×10 ⁻²
TRH25VN	1.04×10 ⁻¹	2.17×10	1.04×10 ⁻¹	2.17×10	8.62×10 ⁻²
TRH25VE	7.35×10 ⁻²	1.60×10 ⁻²	7.35×10 ⁻²	1.60×10 ⁻²	8.62×10 ⁻²
TRH30VN	6.52×10 ⁻²	1.34×10 ⁻²	6.52×10 ⁻²	1.34×10 ⁻²	7.69×10 ⁻²
TRH30VE	6.12×10 ⁻²	1.33×10 ⁻²	6.12×10 ⁻²	1.33×10 ⁻²	7.15×10 ⁻²
TRH35VN	6.95×10 ⁻²	1.43×10 ⁻²	6.95×10 ⁻²	1.43×10 ⁻²	6.29×10 ⁻²
TRH35VE	5.25×10 ⁻²	1.15×10 ⁻²	5.25×10 ⁻²	1.15×10 ⁻²	5.85×10 ⁻²
TRH45VL	5.80×10 ⁻²	1.24×10 ⁻²	5.80×10 ⁻²	1.24×10 ⁻²	4.38×10 ⁻²
TRH45VE	4.59×10 ⁻²	1.00×10 ⁻²	4.59×10 ⁻²	1.00×10 ⁻²	4.38×10 ⁻²
TRH55VL	5.25×10 ⁻²	1.07×10 ⁻²	5.25×10 ⁻²	1.07×10 ⁻²	3.78×10 ⁻²
TRH55VE	4.08×10 ⁻²	8.69×10 ⁻³	4.08×10 ⁻²	8.69×10 ⁻³	3.78×10 ⁻²
TRH65VL	4.52×10 ⁻²	8.76×10 ⁻³	4.52×10 ⁻²	8.76×10 ⁻³	3.24×10 ⁻²
TRH65VE	3.27×10 ⁻²	6.77×10 ⁻³	3.27×10 ⁻²	6.77×10 ⁻³	3.24×10 ⁻²

Kx : Equivalent moment factor in the rolling direction.

K_y: Equivalent moment factor in the pitching direction.

Kz : Equivalent moment factor in the deflection direction.

Table 1.6.2	TRH-F
-------------	-------

	Equivalent Factors K _y (mm ⁻¹)		Equivalent		
Model No.	Equivalent Load Calculation for a system Using One Linear Guide Block	Equivalent Load Calculation for a system Using Two Linear Guide Blocks laid Over One-Another	Equivalent Load Calculation for a system Using One Linear Guide Block	Equivalent Load Calculation for a system Using Two Linear Guide Blocks Iaid Over One-Another	Equivalent Factors K _* (mm ⁻¹)
TRH15FN	1.48×10 ⁻¹	3.11×10 ⁻²	1.48×10 ⁻¹	3.11×10 ⁻²	1.34×10 ⁻¹
TRH15FL	1.26×10 ⁻¹	2.70×10 ⁻²	1.26×10 ⁻¹	2.70×10 ⁻²	1.34×10 ⁻¹
TRH20FN	1.11×10 ⁻¹	2.35×10 ⁻²	1.11×10 ⁻¹	2.35×10 ⁻²	9.90×10 ⁻²
TRH20FE	8.00×10 ⁻²	1.78×10 ⁻²	8.00×10 ⁻²	1.78×10 ⁻²	9.90×10 ⁻²
TRH25FN	1.04×10 ⁻¹	2.17×10	1.04×10 ⁻¹	2.17×10	8.62×10
TRH25FE	7.35×10 ⁻²	1.60×10 ⁻²	7.35×10 ⁻²	1.60×10 ⁻²	8.62×10 ⁻²
TRH30FN	6.52×10 ⁻²	1.34×10 ⁻²	6.52×10 ⁻²	1.34×10 ⁻²	7.69×10 ⁻²
TRH30FE	6.12×10 ⁻²	1.33×10 ⁻²	6.12×10 ⁻²	1.33×10 ⁻²	7.15×10 ⁻²
TRH35FN	6.95×10 ⁻²	1.43×10 ⁻²	6.95×10 ⁻²	1.43×10 ⁻²	6.29×10 ⁻²
TRH35FE	5.25×10 ⁻²	1.15×10 ⁻²	5.25×10 ⁻²	1.15×10 ⁻²	5.85×10 ⁻²
TRH45FL	5.80×10 ⁻²	1.24×10 ⁻²	5.80×10 ⁻²	1.24×10 ⁻²	4.38×10 ⁻²
TRH45FE	4.59×10 ⁻²	1.00×10 ⁻²	4.59×10 ⁻²	1.00×10 ⁻²	4.38×10 ⁻²
TRH55FL	5.25×10 ⁻²	1.07×10 ⁻²	5.25×10 ⁻²	1.07×10 ⁻²	3.78×10 ⁻²
TRH55FE	4.08×10 ⁻²	8.69×10 ⁻³	4.08×10 ⁻²	8.69×10 ⁻³	3.78×10 ⁻²
TRH65FL	4.52×10 ⁻²	8.76×10 ⁻³	4.52×10 ⁻²	8.76×10 ⁻³	3.24×10 ⁻²
TRH65FE	3.27×10 ⁻²	6.77×10 ⁻³	3.27×10 ⁻²	6.77×10 ⁻³	3.24×10 ⁻²

 $\begin{array}{l} K_x: \mbox{Equivalent moment factor in the rolling direction.} \\ K_y: \mbox{Equivalent moment factor in the pitching direction.} \\ K_z: \mbox{Equivalent moment factor in the deflection direction.} \end{array}$

1-6 Safety Factor and Load

Table 1.6.3 TRS-V

	Equivalent Factors K _y (mm ⁻¹)		Equivalent		
Model No.	Equivalent Load Calculation for a system Using One Linear Guide Block	Equivalent Load Calculation for a system Using Two Linear Guide Blocks laid Over One-Another	Equivalent Load Calculation for a system Using One Linear Guide Block	Equivalent Load Calculation for a system Using Two Linear Guide Blocks Iaid Over One-Another	Equivalent Factors K _* (mm ⁻¹)
TRS15VS	2.29×10 ⁻¹	4.39×10 ⁻²	2.29×10 ⁻¹	4.39×10 ⁻²	1.34×10 ⁻¹
TRS15VN	1.48×10 ⁻¹	3.11×10 ⁻²	1.48×10 ⁻¹	3.11×10 ⁻²	1.34×10 ⁻¹
TRS20VS	2.00×10 ⁻¹	3.58×10 ⁻²	2.00×10 ⁻¹	3.58×10 ⁻²	9.90×10 ⁻²
TRS20VN	1.25×10 ⁻¹	2.60×10 ⁻²	1.25×10 ⁻¹	2.60×10 ⁻²	9.90×10 ⁻²
TRS25VS	1.60×10 ⁻¹	3.07×10 ⁻²	1.60×10 ⁻¹	3.07×10 ⁻²	8.62×10 ⁻²
TRS25VN	1.04×10 ⁻¹	2.17×10 ⁻²	1.04×10 ⁻¹	2.17×10 ⁻²	8.62×10 ⁻²
TRS30VS	1.47×10 ⁻¹	2.57×10 ⁻²	1.47×10 ⁻¹	2.57×10 ⁻²	7.15×10 ⁻²
TRS30VN	8.65×10 ⁻²	1.82×10 ⁻²	8.65×10 ⁻²	1.82×10 ⁻²	7.15×10 ⁻²
TRS35VN	7.87×10 ⁻²	1.61×10 ⁻²	7.87×10 ⁻²	1.61×10 ⁻²	5.85×10 ⁻²
TRS35VE	5.25×10 ⁻²	1.15×10 ⁻²	5.25×10 ⁻²	1.15×10 ⁻²	5.85×10 ⁻²
TRS45VN	6.89×10 ⁻²	1.39×10 ⁻²	6.89×10 ⁻²	1.39×10 ⁻²	4.38×10 ⁻²

Kx : Equivalent moment factor in the rolling direction.

K_y: Equivalent moment factor in the pitching direction.

Kz : Equivalent moment factor in the deflection direction.

Table 1.6.4 TRS-F

	Equivalent Factors K _y (mm ⁻¹)		Equivalent		
Model No.	Equivalent Load Calculation for a system Using One Linear Guide Block	Equivalent Load Calculation for a system Using Two Linear Guide Blocks laid Over One-Another	Equivalent Load Calculation for a system Using One Linear Guide Block	Equivalent Load Calculation for a system Using Two Linear Guide Blocks Iaid Over One-Another	Equivalent Factors K _* (mm ⁻¹)
TRS15FS	2.29×10 ⁻¹	2.29×10 ⁻¹ 4.39×10 ⁻²		4.39×10 ⁻²	1.34×10 ⁻¹
TRS15FN	1.48×10 ⁻¹	3.11×10 ⁻²	1.48×10 ⁻¹	3.11×10 ⁻²	1.34×10 ⁻¹
TRS20FS	2.00×10 ⁻¹	3.58×10 ⁻²	2.00×10 ⁻¹	3.58×10 ⁻²	9.90×10 ⁻²
TRS20FN	1.25×10 ⁻¹	2.60×10 ⁻²	1.25×10 ⁻¹	2.60×10 ⁻²	9.90×10 ⁻²
TRS25FN	1.04×10 ⁻¹	2.17×10 ⁻²	1.04×10 ⁻¹	2.17×10 ⁻²	8.62×10 ⁻²

K_x : Equivalent moment factor in the rolling direction.

 K_y : Equivalent moment factor in the pitching direction.

Kz : Equivalent moment factor in the deflection direction.

Table 1.6.5 TRC-V

	Equivalent Factors K _y (mm ⁻¹)		Equivalent		
Model No.	Equivalent Load Calculation for a system Using One Linear Guide Block	Equivalent Load Calculation for a system Using Two Linear Guide Blocks laid Over One-Another	Equivalent Load Calculation for a system Using One Linear Guide Block	Equivalent Load Calculation for a system Using Two Linear Guide Blocks laid Over One-Another	Equivalent Factors K _* (mm ⁻¹)
TRC25VE	7.35×10 ⁻²	1.60×10 ⁻²	7.35×10 ⁻²	1.60×10 ⁻²	8.62×10 ⁻²

Kx : Equivalent moment factor in the rolling direction.

K_y: Equivalent moment factor in the pitching direction.

 K_z : Equivalent moment factor in the deflection direction.

1-6 Safety Factor and Load

Table 1.6.6 TH-N

	Equivalent Factors Ky(mm ⁻¹)		Equivalent		
Model No.	Equivalent Load Calculation for a system Using One Linear Guide Block	Equivalent Load Calculation for a system Using Two Linear Guide Blocks laid Over One-Another	Equivalent Load Calculation for a system Using One Linear Guide Block	Equivalent Load Calculation for a system Using Two Linear Guide Blocks Iaid Over One-Another	Equivalent Factors K _x (mm ⁻¹)
TH07NN	H07NN 8.88x10 ⁻¹ 6.31x10 ⁻²		8.88x10 ⁻¹	6.31x10 ⁻²	2.74x10 ⁻¹
TH07NL	4.41x10 ⁻¹	5.16x10 ⁻²	4.41x10 ⁻¹	5.16x10 ⁻²	2.74x10 ⁻¹
TH09NN	4.41x10 ⁻¹	5.26x10 ⁻²	4.41x10 ⁻¹	5.26x10 ⁻²	2.19x10 ⁻¹
TH09NL	TH09NL 2.76x10 ⁻¹ 4.0		2.76x10 ⁻¹	4.08x10 ⁻²	2.19x10 ⁻¹
TH12NN	4.90x10 ⁻¹	4.32x10 ⁻²	4.90x10 ⁻¹	4.32x10 ⁻²	1.64x10 ⁻¹
TH12NL	2.67x10 ⁻¹	3.42x10 ⁻²	2.67x10 ⁻¹	3.42x10 ⁻²	1.64x10 ⁻¹
TH15NN	3.60x10 ⁻¹	3.61x10 ⁻²	3.60x10 ⁻¹	3.61x10 ⁻²	1.32x10 ⁻¹
TH15NL	1.94x10 ⁻¹	2.76x10 ⁻²	1.94x10 ⁻¹	2.76x10 ⁻²	1.32x10 ⁻¹

Kx : Equivalent moment factor in the rolling direction.

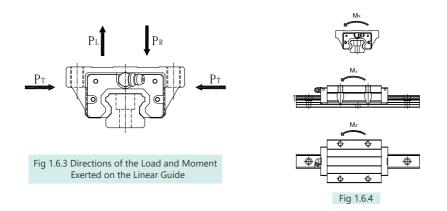
K_y : Equivalent moment factor in the pitching direction.

Kz : Equivalent moment factor in the deflection direction.

■ 1-6-2 Calculating the Equivalent Load

The Linear Guide can bear loads and moments from all directions, including a radial load (P_R), reverse-radial load (P_L), and lateral load (P_T), simultaneously.

- PR: Radial load
- Mx : Moment in the rolling direction
- P∟: Reverse-radial load
- PT : Lateral load
- M_y : Moment in the pitching direction M_z : Moment in the deflection direction



Equivalent load PE

When more than one load (e.g., radial and lateral loads) is exerted on the Linear Guide simultaneously, the service life and static safety factors should be calculated by using equivalent load values obtained by converting all loads involved into radial, lateral, and other loads involved.

Equivalent-load equation

The Linear Guide can bear loads and moments from all directions, including a radial load (P_R), reverse-radial load (P_L) and lateral load (P_T) simultaneously.

When a radial load ($P_{R(L)}$) and a lateral (P_T) are applied simultaneously the equivalent load can be obtained by using the following equation.

 $\begin{array}{l} P_E: (equivalent \mbox{ load}) = X \cdot P_{R(L)} + Y \cdot P_T \\ P_{R(L)}: Radial \mbox{ load} \\ P_T: Lateral \mbox{ load} \\ X, Y = 1 \end{array}$

1-7 Calculation of Average Working Load

■ 1-7-1 Calculating the Mean Load

An industrial robot grasp a workpiece by its arm as it advances, moving forward with the load, when it returns, the arm has no load other than its tare. In a machine tool, Linear Guide blocks receive variable loads according to the host-system operating conditions. Therefore, the calculation of service life should take such fluctuation into consideration.

When the service life of a Linear Guide with variable load is equal to the one with certain load then that certain load is called the Mean Load (P_m).

$$P_{m} = \sqrt[3]{\frac{1}{L} \cdot \Sigma \left(P_{n}^{3} \cdot L_{n}\right)}$$


P _m : Mean load	(kg)
Pn : Varying load	(kg)
Lc : Total running distance	(mm)
 Pupping dictance under load. 	Dn(mm)

Ln : Running distance under load Pn(mm)

(1) For Loads with Stepwise Change


$$P_{m} = \sqrt[3]{\frac{1}{L} \left(P_{1}^{3} \cdot L_{1} + P_{2}^{3} \cdot L_{2} \cdot ... + P_{n}^{3} \cdot L_{n} \right)}....(1)$$

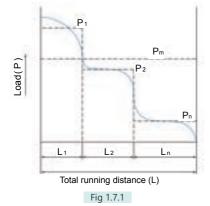- P_m : Mean load (kg)
- Pn : Varying load (kg)
- Lc : Total running distance (mm)
- Ln : Running distance under load Pn(mm)





% This equation and equation (1) below apply in cases in which therolling elements are balls.

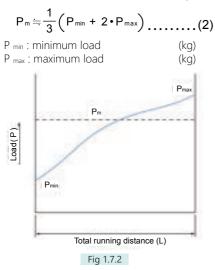(2) For Loads with Monotonous Changes



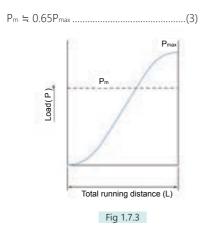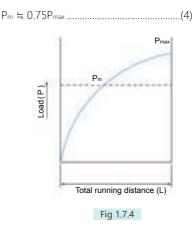(3) For Loads with Sinusoidal Changes






1-7 Calculation of Average Working Load

■ 1-7-2 Mean Load Calculation Example (I)

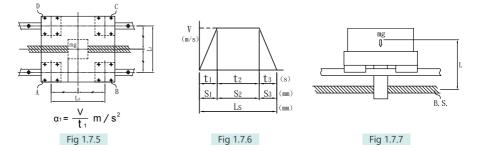(1) Horizontal Installations are subjected to Acceleration and Deceleration



(2) Load Applied to the Linear Guide Block

- 1. During uniform motion2. During acceleration3. During deceleration $P_{1} = + \frac{mg}{4}$ $P_{a_1} = P_1 + \frac{m \cdot \alpha_1 \cdot L_2}{2 \cdot L_1}$ $P_{a_1} = P_1 \frac{m \cdot \alpha_1 \cdot L_2}{2 \cdot L_1}$ $P_2 = + \frac{mg}{4}$ $P_{a_2} = P_2 + \frac{m \cdot \alpha_1 \cdot L_2}{2 \cdot L_1}$ $P_{a_2} = P_2 + \frac{m \cdot \alpha_1 \cdot L_2}{2 \cdot L_1}$ $P_3 = + \frac{mg}{4}$ $P_{a_3} = P_3 + \frac{m \cdot \alpha_1 \cdot L_2}{2 \cdot L_2}$ $P_{a_3} = P_3 + \frac{m \cdot \alpha_1 \cdot L_2}{2 \cdot L_2}$ $P_4 = + \frac{mg}{4}$ $P_{a_3} = P_4 + \frac{m \cdot \alpha_1 \cdot L_2}{2 \cdot L_2}$ $P_{a_4} = P_4 + \frac{m \cdot \alpha_1 \cdot L_2}{2 \cdot L_2}$
- (3) Mean Load

$$P_{m_{1}} = \sqrt[3]{\frac{1}{L_{s}} \left(P_{a_{1}}^{3} \cdot S_{1} + P_{1}^{3} \cdot S_{2} + P_{d}^{3} \cdot S_{3} \right)} P_{m_{3}} = \sqrt[3]{\frac{1}{L_{s}} \left(P_{a_{3}}^{3} \cdot S_{1} + P_{3}^{3} \cdot S_{2} + P_{d_{3}}^{3} \cdot S_{3} \right)}$$

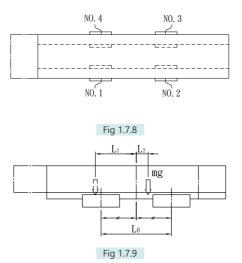
$$P_{m_{2}} = \sqrt[3]{\frac{1}{L_{s}} \left(P_{a_{2}}^{3} \cdot S_{1} + P_{2}^{2} \cdot S_{2} + P_{d_{2}}^{3} \cdot S_{3} \right)} P_{m_{4}} = \sqrt[3]{\frac{1}{L_{s}} \left(P_{a_{4}}^{3} \cdot S_{1} + P_{4}^{3} \cdot S_{2} + P_{d_{3}}^{3} \cdot S_{3} \right)}$$

[%]Pan1 · Pdn represent loads exerted on the Linear Guide block. The suffix "n" indicates the block number in the diagram above.

A Linear Guide

Mean Load Calculation Example (II)

(1) Operating conditions-Installations on Rails.



(2) Load applied to the Linear Guide block

1. At the left of the arm 2. At the right of the arm

(3) Mean load

$P_{L1} = + \frac{mg}{4} + \frac{mg\cdotL_1}{2\cdotL_0}$	$P_{r_1} = + \frac{mg}{4} - \frac{mg \cdot L_1}{2 \cdot L_0}$	$P_{m1} = \frac{1}{3} (2 \cdot P_{L1} + P_{r1})$
$P_{L2} = + \frac{mg}{4} - \frac{mg\cdotL_1}{2\cdotL_0}$		$P_{m_1} = \frac{1}{3} (2 \cdot P_{L_2} + P_{r_2})$
$P_{L3} = + \frac{mg}{4} - \frac{mg\cdotL_1}{2\cdotL_0}$	$P_{r_3} = + \frac{mg}{4} + \frac{mg \cdot L_1}{2 \cdot L_0}$	$P_{m_1} = \frac{1}{3} (2 \cdot P_{L_3} + P_{r_3})$
$P_{L4} = + \frac{mg}{4} + \frac{mg\cdotL_1}{2\cdotL_0}$	$P_{r_4} = + \frac{mg}{4} - \frac{mg \cdot L_1}{2 \cdot L_0}$	$P_{m_1} = \frac{1}{3} (2 \cdot P_{L_4} + P_{r_4})$

*PLn • Pm represent loads exerted on the Linear Guide block. The suffix "n" indicates the block number in the diagram above.


1-8 Calculation Example


■ 1-8-1 Calculation Examples (I)

(1) Operating conditions-Horizontal installations subjected to high acceleration and deceleration.

Model number : TRH30FE Basic dynamic-load rating C = 4791 kg Basic static-load rating C₀ = 9004 kg Gravitational acceleration : g = 9.8 (m/s²) Load : m₁ = 600 kg Load : m₂ = 380 kg Velocity : V = 0.5 m/s Time : t₁ = 0.05 s Time : t₂ = 2.8 s Time : t₃ = 0.15 s Acceleration : $a_1 = 10 \text{ m/s}^2$ Deceleration : $a_3 = 3.333 \text{ m/s}^2$ Stroke : $L_s = 1450 \text{ mm}$ Distance : $L_0 = 600 \text{ mm}$ $L_1 = 400 \text{ mm}$ $L_2 = 100 \text{ mm}$ $L_3 = 50 \text{ mm}$ $L_4 = 200 \text{ mm}$



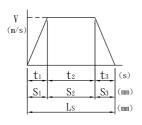

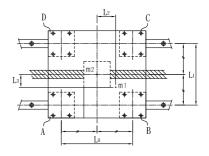





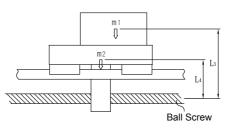


Fig 1.8.3

(2) Load Exerted on the Linear Guide by the Linear Guide Block

The calculations of blocks' load distribution under various circumstances.

1. In uniform motion Load applied in radial direction P_n (Base on the first condition of load exerted (please refer to page A15, No.1), taking m_1 and m_2 into consideration.

 $P_{A} = \frac{m_{1}}{4} - \frac{m_{1} \cdot L_{2}}{2 \cdot L_{0}} + \frac{m_{1} \cdot L_{3}}{2 \cdot L_{1}} + \frac{m_{2}}{4} = 232.5 \text{ kg} \quad P_{0} = \frac{m_{1}}{4} + \frac{m_{1} \cdot L_{2}}{2 \cdot L_{0}} - \frac{m_{1} \cdot L_{3}}{2 \cdot L_{1}} + \frac{m_{2}}{4} = 257.5 \text{ kg}$ $P_{B} = \frac{m_{1}}{4} + \frac{m_{1} \cdot L_{2}}{2 \cdot L_{0}} + \frac{m_{1} \cdot L_{3}}{2 \cdot L_{1}} + \frac{m_{2}}{4} = 332.5 \text{ kg} \quad P_{0} = \frac{m_{1}}{4} - \frac{m_{1} \cdot L_{2}}{2 \cdot L_{0}} - \frac{m_{1} \cdot L_{3}}{2 \cdot L_{1}} + \frac{m_{2}}{4} = 157.5 \text{ kg}$

2. During acceleration to the left Load applied in radial direction P_nL_a and lateral direction P_ntL_a (Base on the 8th condition of load exerted (please refer to page A18. No.8). The load should allocate on the central of table, and $\frac{m_1}{4}$ should be re-placed (please refer to page A15. No.1) by P_n).

 $P_{AL_{a}} = P_{A^{-}} \frac{m_{1} \cdot a_{1} \cdot L_{5}}{2 \cdot L_{0} \cdot g} = \frac{m_{2} \cdot a_{1} \cdot L_{4}}{2 \cdot L_{0} \cdot g} = -36.206 \text{ kg } P_{c}L_{a} = P_{c^{-}} \frac{m_{1} \cdot a_{1} \cdot L_{5}}{2 \cdot L_{0} \cdot g} = \frac{m_{2} \cdot a_{1} \cdot L_{4}}{2 \cdot L_{0} \cdot g} = -11.206 \text{ kg}$ $P_{B}L_{a} = P_{B^{-}} \frac{m_{1} \cdot a_{1} \cdot L_{5}}{2 \cdot L_{0} \cdot g} = \frac{m_{2} \cdot a_{1} \cdot L_{4}}{2 \cdot L_{0} \cdot g} = 63.794 \text{ kg } P_{0}L_{a} = P_{D^{-}} \frac{m_{1} \cdot a_{1} \cdot L_{5}}{2 \cdot L_{0} \cdot g} = \frac{m_{2} \cdot a_{1} \cdot L_{4}}{2 \cdot L_{0} \cdot g} = -111.206 \text{ kg}$ $P_{A_{1}L_{a}} = -\frac{m_{1} \cdot a_{1} \cdot L_{3}}{2 \cdot L_{0} \cdot g} = -25.51 \text{ kg}$ $P_{c_{1}L_{a}} = -\frac{m_{1} \cdot a_{1} \cdot L_{3}}{2 \cdot L_{0} \cdot g} = 25.51 \text{ kg}$ $P_{D_{1}L_{a}} = -\frac{m_{1} \cdot a_{1} \cdot L_{3}}{2 \cdot L_{0} \cdot g} = -25.51 \text{ kg}$

3. During deceleration to the left Load applied in radial direction PnLd

 $P_{A}L_{d}=P_{A}+\frac{m_{1}\cdot a_{3}\cdot L_{5}}{2\cdot L_{0}\cdot g}+\frac{m_{2}\cdot a_{3}\cdot L_{4}}{2\cdot L_{0}\cdot g}=334.53 \text{ kg} \quad P_{c}L_{d}=P_{c}-\frac{m_{1}\cdot a_{3}\cdot L_{5}}{2\cdot L_{0}\cdot g}-\frac{m_{2}\cdot a_{3}\cdot L_{4}}{2\cdot L_{0}\cdot g}=155.47 \text{ kg}$ $P_{B}L_{d}=P_{B}-\frac{m_{1}\cdot a_{3}\cdot L_{5}}{2\cdot L_{0}\cdot g}-\frac{m_{2}\cdot a_{3}\cdot L_{4}}{2\cdot L_{0}\cdot g}=230.47 \text{ kg} \quad P_{0}L_{d}=P_{0}+\frac{m_{1}\cdot a_{3}\cdot L_{5}}{2\cdot L_{0}\cdot g}+\frac{m_{2}\cdot a_{3}\cdot L_{4}}{2\cdot L_{0}\cdot g}=259.53 \text{ kg}$

Load applied in lateral direction PntLd

 $P_{At}L_{d} = \frac{M1 \cdot a_{3} \cdot L_{3}}{2 \cdot L_{0} \cdot g} = 2.721 \text{ kg} \qquad P_{ct}L_{d} = -\frac{M1 \cdot a_{3} \cdot L_{3}}{2 \cdot L_{0} \cdot g} = -2.721 \text{ kg}$ $P_{Bt}L_{d} = -\frac{M1 \cdot a_{3} \cdot L_{3}}{2 \cdot L_{0} \cdot g} = -2.721 \text{ kg} \qquad P_{Dt}L_{d} = \frac{M1 \cdot a_{3} \cdot L_{3}}{2 \cdot L_{0} \cdot g} = 2.721 \text{ kg}$

1-8 Calculation Example

4. During acceleration to the right Load applied in radial direction PnRa

 $P_{A}R_{a}=P_{A}+\frac{m_{1}\cdot a_{1}\cdot L_{5}}{2\cdot L_{0}\cdot g}+\frac{m_{2}\cdot a_{1}\cdot L_{4}}{2\cdot L_{0}\cdot g}=501.206 \text{ kg} \qquad P_{c}R_{a}=P_{c}-\frac{m_{1}\cdot a_{1}\cdot L_{5}}{2\cdot L_{0}\cdot g}-\frac{m_{2}\cdot a_{1}\cdot L_{4}}{2\cdot L_{0}\cdot g}=-21.206 \text{ kg}$ $P_{B}R_{a}=P_{B}-\frac{m_{1}\cdot a_{1}\cdot L_{5}}{2\cdot L_{0}\cdot g}-\frac{m_{2}\cdot a_{1}\cdot L_{4}}{2\cdot L_{0}\cdot g}=63.794 \text{ kg} \qquad P_{D}R_{a}=P_{D}+\frac{m_{1}\cdot a_{1}\cdot L_{5}}{2\cdot L_{0}\cdot g}+\frac{m_{2}\cdot a_{1}\cdot L_{4}}{2\cdot L_{0}\cdot g}=426.206 \text{ kg}$

Load applied in lateral direction PnR

 $P_{A_{1}}R_{d} = \frac{M_{1} \cdot a_{1} \cdot L_{3}}{2 \cdot L_{0} \cdot g} = 25.51 \text{ kg}$ $P_{C_{1}}R_{d} = -\frac{M_{1} \cdot a_{1} \cdot L_{3}}{2 \cdot L_{0} \cdot g} = -25.51 \text{ kg}$ $P_{D_{1}}R_{d} = -\frac{M_{1} \cdot a_{1} \cdot L_{3}}{2 \cdot L_{0} \cdot g} = 25.51 \text{ kg}$

5. During deceleration to the right Load applied in radial direction $P_n R_d$ and Load applied in lateral direction $P_n R_d$

 $P_{A}R_{d} = P_{A} - \frac{m_{1} \cdot a_{3} \cdot L_{5}}{2 \cdot L_{0} \cdot g} - \frac{m_{2} \cdot a_{3} \cdot L_{4}}{2 \cdot L_{0} \cdot g} = 130.47 \text{ kg}$

 $\mathsf{P}_{\mathsf{B}}\mathsf{R}_{\mathsf{d}} = \mathsf{P}_{\mathsf{B}} + \frac{m_1 \cdot a_3 \cdot \mathsf{L}_5}{2 \cdot \mathsf{L}_0 \cdot g} + \frac{m_2 \cdot a_3 \cdot \mathsf{L}_4}{2 \cdot \mathsf{L}_0 \cdot g} = 434.53 \text{ kg}$

 $P_{c}R_{d} = P_{c} + \frac{m_{1} \cdot a_{3} \cdot L_{5}}{2 \cdot L_{0} \cdot g} + \frac{m_{2} \cdot a_{3} \cdot L_{4}}{2 \cdot L_{0} \cdot g} = 359.53 \text{ kg}$

 $P_{D}R_{d} = P_{D} - \frac{m_{1} \cdot a_{3} \cdot L_{5}}{2 \cdot L_{0} \cdot g} - \frac{m_{2} \cdot a_{3} \cdot L_{4}}{2 \cdot L_{0} \cdot g} = 55.47 \text{ kg}$

Load applied in lateral direction PntRd

$$P_{At}R_{d} = -\frac{m_{1} \cdot a_{3} \cdot L_{3}}{2 \cdot L_{0} \cdot g} = -2.721 \text{ kg} \qquad P_{ct}R_{d} = \frac{m_{1} \cdot a_{3} \cdot L_{3}}{2 \cdot L_{0} \cdot g} = 2.721 \text{ kg}$$

$$P_{Bt}R_{d} = \frac{m_{1} \cdot a_{3} \cdot L_{3}}{2 \cdot L_{0} \cdot g} = -2.721 \text{ kg}$$

$$P_{Dt}R_{d} = -\frac{m_{1} \cdot a_{3} \cdot L_{3}}{2 \cdot L_{0} \cdot g} = -2.721 \text{ kg}$$

(3) Combined radial and thrust load P_{En}

1. In uniform motion PEn

PEA=PA=232.5 kg PEB=PB=332.5 kg PEC=PC=257.5 kg PED=PD=157.5 kg

2. During acceleration to the left PEnLa

 $\begin{array}{l} {\sf P}_{EA}{\sf L}_a = \mid {\sf P}_{A}{\sf L}_a \mid + \mid {\sf P}_{At}{\sf L}_a \mid = 61.716 \ kg \\ {\sf P}_{EB}{\sf L}_a = \mid {\sf P}_{B}{\sf L}_a \mid + \mid {\sf P}_{Bt}{\sf L}_a \mid = 89.304 \ kg \\ {\sf P}_{EC}{\sf L}_a = \mid {\sf P}_{C}{\sf L}_a \mid + \mid {\sf P}_{Ct}{\sf L}_a \mid = 36.716 \ kg \\ {\sf P}_{ED}{\sf L}_a = \mid {\sf P}_{D}{\sf L}_a \mid + \mid {\sf P}_{Dt}{\sf L}_a \mid = 136.716 \ kg \end{array}$

4. During acceleration to the right $P_{En}R_a$

 $\begin{array}{l} {P_{EA}R_a = \mid P_AR_a \mid + \mid P_{At}R_a \mid = 526.716 \ kg} \\ {P_{EB}R_a = \mid P_BR_a \mid + \mid P_{Bt}R_a \mid = 89.304 \ kg} \\ {P_{EC}R_a = \mid P_{C}R_a \mid + \mid P_{Ct}R_a \mid = 46.716 \ kg} \\ {P_{ED}R_a = \mid P_{D}R_a \mid + \mid P_{Dt}R_a \mid = 451.716 \ kg} \end{array}$

3. During deceleration to the left P_{EnLd}

 $\begin{array}{l} {\sf P}_{\sf EALd} = \mid {\sf P}_{\sf ALd} \mid + \mid {\sf P}_{\sf AtLd} \mid = 337.251 \ kg \\ {\sf P}_{\sf EBLd} = \mid {\sf P}_{\sf BLd} \mid + \mid {\sf P}_{\sf BtLd} \mid = 233.191 \ kg \\ {\sf P}_{\sf ECLd} = \mid {\sf P}_{\sf CLd} \mid + \mid {\sf P}_{\sf CtLd} \mid = 158.191 \ kg \\ {\sf P}_{\sf EDLd} = \mid {\sf P}_{\sf DLd} \mid + \mid {\sf P}_{\sf DtLd} \mid = 262.251 \ kg \end{array}$

5. During deceleration to the right PEnLd

$P_{EA}R_d = $	PAR _d	+	PAtRd	=133	.191 kg
PEBRd=	PBRd	+	$P_{Bt}R_{d}$	=437	.261 kg
PECRd=	PcRd	+	$P_{Ct}R_{d}$	=360	.251 kg
PEDRd=	PdRd	+	PdtRd	=58.	191 kg

(4) Static Safety Factor

As shown above, it is during acceleration of the A Linear Guide to the right when the maximum load is exerted on the Linear Guide. Therefore, the static safety factor (f.) becomes as follows :

 $f_{s} = \frac{C_0}{526.716} = \frac{9004}{526.716} = 17.09$

1-8 Calculation Example

(5) Mean Load Pmn

For each block, load is different under uniform speed, acceleration and deceleration circumstances. To acquire service life, mean load must be calculated by acquiring the travel distance of each block during uniform speed, acceleration and deceleration in advance.

$$I = \frac{1}{2} t_1 V = \frac{1}{2} (0.05)(0.5) m = 0.0125 m = 12.5 mm$$
 $S_3 = \frac{1}{2} t_3 V = (0.15)(0.5) m = 0.0375 m = 37.5 mn$

The mean load on each I M block is as follows :

$$P_{mA} = \sqrt[3]{\frac{1}{2 \cdot L_{s}} \left(P_{EA}^{3} \ell a \cdot S_{1} + P_{EA}^{3} \cdot S_{2} + P_{EA}^{3} \ell d \cdot S_{3} + P_{EA}^{3} Ra \cdot S_{1} + P_{EA}^{3} \cdot S_{2} + P_{EA}^{3} Rd \cdot S_{3} \right)} = 236.88 \text{ kg}$$

$$P_{mB} = \sqrt[3]{\frac{1}{2 \cdot L_{s}} \left(P_{EB}^{3} \ell a \cdot S_{1} + P_{EB}^{3} \cdot S_{2} + P_{EB}^{3} \ell d \cdot S_{3} + P_{EB}^{3} Ra \cdot S_{1} + P_{EB}^{3} \cdot S_{2} + P_{EB}^{3} Rd \cdot S_{3} \right)} = 332.45 \text{ kg}$$

$$P_{mC} = \sqrt[3]{\frac{1}{2 \cdot L_{s}} \left(P_{EC}^{3} \ell a \cdot S_{1} + P_{EC}^{3} \cdot S_{2} + P_{EC}^{3} \ell d \cdot S_{3} + P_{EC}^{3} Ra \cdot S_{1} + P_{EC}^{3} \cdot S_{2} + P_{EC}^{3} Rd \cdot S_{3} \right)} = 257.84 \text{ kg}$$

$$P_{mD} = \sqrt[3]{\frac{1}{2 \cdot L_{s}} \left(P_{ED}^{3} \ell a \cdot S_{1} + P_{ED}^{3} \cdot S_{2} + P_{ED}^{3} \ell d \cdot S_{3} + P_{ED}^{3} Ra \cdot S_{1} + P_{EC}^{3} \cdot S_{2} + P_{ED}^{3} Rd \cdot S_{3} \right)} = 164.07 \text{ kg}$$

$$(6) \text{ Nominal life Ln (Assume f_{w} = 1.5)}$$

$$(L_{A} = \frac{C}{f_{w} \cdot P_{mA}} \right)^{3} \cdot 50 = 122568.85 \text{ km} \quad (L_{C} = \frac{C}{f_{w} \cdot P_{mC}} \right)^{3} \cdot 50 = 95044.15 \text{ km}$$

$$(L_{B} = \frac{C}{f_{w} \cdot P_{mB}} \right)^{3} \cdot 50 = 44339.87 \text{ km} \quad (L_{D} = \frac{C}{f_{w} \cdot P_{mD}} \right)^{3} \cdot 50 = 368902.68 \text{ km}$$

*From these calculations, 44339.87 km (the running distance of Linear Guide No.B) is obtained as the service life of the Linear Guide used in a machine or system under the operating conditions specified above.

In the example above, we assume that we have two loads(W_1 and W_2). If there is only one load W_1 , simply take W_2 as zero. The appropriate formula determined by condition of loading.

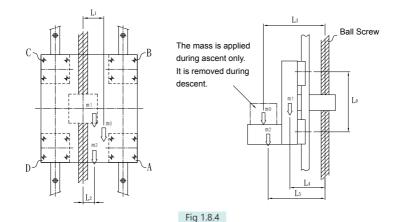
Example (II)

(1) Operation Conditions-Vertical Installations Table (L type) has combined blocks weight w1 and w2. Furthermore, the mass w₀ is applied during uniform ascent by Distance 1000 mm. After the mass is dropped, empty table is removed during uniform descent. The table has total four Linear Guide blocks.

Model number : TRH30FE

(dynamic-load rating : C = 4791 kg) (static-load rating : $C_0 = 9004 \text{ kg}$) Gravitational Acceleration : $g = 9.8 (m/s^2)$ L₂ = 50 mm Mass : mo = 200 kg Weight of Table1 : m1 = 400 kg Weight of Table2 : $m_2 = 200 \text{ kg}$





Linear Guide

A

ABOUT LINEAR GUIDE

1-8 Calculation Example

(2) Calculation of blocks load distribution under various circumstances.

When the Linear Guide move vertically, take M_0 , M_1 and M_2 into consideration individually by using the third condition shown in 1.5.1 [please refer to A16. No.3]

1. The radial load(Pm) of blocks while ascending with load Mo.

 $P_{AU} = \frac{m_1 \cdot L_4}{2 \cdot L_0} + \frac{m_2 \cdot L_5}{2 \cdot L_0} + \frac{m_0 \cdot L_3}{2 \cdot L_0} = 276.7 \text{ kg} \quad P_{CU} = -\frac{m_1 \cdot L_4}{2 \cdot L_0} - \frac{m_2 \cdot L_5}{2 \cdot L_0} - \frac{m_0 \cdot L_3}{2 \cdot L_0} = -276.7 \text{ kg}$

 $P_{\text{BU}} = -\frac{m_1 \cdot \text{L}_4}{2 \cdot \text{L}_0} - \frac{m_2 \cdot \text{L}_5}{2 \cdot \text{L}_0} - \frac{m_0 \cdot \text{L}_3}{2 \cdot \text{L}_0} = -276.7 \text{ kg} \quad P_{\text{DU}} = \frac{m_1 \cdot \text{L}_4}{2 \cdot \text{L}_0} + \frac{m_2 \cdot \text{L}_5}{2 \cdot \text{L}_0} + \frac{m_0 \cdot \text{L}_3}{2 \cdot \text{L}_0} = 276.7 \text{ kg}$

Lateral load PnTu of blocks while ascending.

 $P_{ATU} = \frac{m_1 \cdot L_2}{2 \cdot L_0} + \frac{m_2 \cdot L_2}{2 \cdot L_0} + \frac{m_0 \cdot L_1}{2 \cdot L_0} = 76.7 \text{ kg} \quad P_{CTU} = -\frac{m_1 \cdot L_2}{2 \cdot L_0} - \frac{m_2 \cdot L_2}{2 \cdot L_0} - \frac{m_0 \cdot L_1}{2 \cdot L_0} = -76.7 \text{ kg}$

 $P_{B}T_{U} = -\frac{m_{1} \cdot L_{2}}{2 \cdot L_{0}} - \frac{m_{2} \cdot L_{2}}{2 \cdot L_{0}} - \frac{m_{0} \cdot L_{1}}{2 \cdot L_{0}} = -76.7 \text{ kg} \quad P_{D}T_{U} = \frac{m_{1} \cdot L_{2}}{2 \cdot L_{0}} + \frac{m_{2} \cdot L_{2}}{2 \cdot L_{0}} + \frac{m_{0} \cdot L_{1}}{2 \cdot L_{0}} = 76.7 \text{ kg}$

2. Radial load of each block while descending with no load.

 $P_{AD} = \frac{m_1 \cdot L_4}{2 \cdot L_0} + \frac{m_2 \cdot L_5}{2 \cdot L_0} = 183.3 \text{ kg}$ $P_{CD} = -\frac{m_1 \cdot L_4}{2 \cdot L_0} - \frac{m_2 \cdot L_5}{2 \cdot L_0} = -183.3 \text{ kg}$ $P_{DD} = -\frac{m_1 \cdot L_4}{2 \cdot L_0} + \frac{m_2 \cdot L_5}{2 \cdot L_0} = 183.3 \text{ kg}$

Lateral load of block while descending.

 $P_{ATD} = \frac{m_2 \cdot L_2}{2 \cdot L_0} + \frac{m_0 \cdot L_2}{2 \cdot L_0} = 33.3 \text{ kg} \qquad P_{CTD} = -\frac{m_2 \cdot L_2}{2 \cdot L_0} - \frac{m_0 \cdot L_2}{2 \cdot L_0} = -33.3 \text{ kg}$

$$P_{B}T_{D}=-\frac{m_{2}\cdot L_{2}}{2\cdot L_{0}}-\frac{m_{0}\cdot L_{2}}{2\cdot L_{0}}=-33.3 \text{ kg} \qquad P_{D}T_{D}=\frac{m_{2}\cdot L_{2}}{2\cdot L_{0}}+\frac{m_{0}\cdot L_{2}}{2\cdot L_{0}}=33.3 \text{ kg}$$

(3) Combined radial and thrust load P_{En}

1. During ascent

Peau = Pau + PaTu = 353.4 kg	$P_{EAD} = P_{AD} + P_{A}T_{D} = 216.6 \text{ kg}$
Реви = Рви + РвТи = 353.4 kg	$P_{EBD} = P_{BD} + P_{B}T_{D} = 216.6 \text{ kg}$
$P_{ECU} = P_{CU} + P_{C}T_{U} = 353.4 \text{ kg}$	$P_{ECD} = P_{CD} + P_{C}T_{D} = 216.6 \text{ kg}$
$P_{EDU} = P_{DU} + P_{D}T_{U} = 353.4 \text{ kg}$	$P_{EDD} = P_{DD} + P_{D}T_{D} = 216.6 \text{ kg}$

(4) Static Safety Factor

The static safety factor (fs) of a machine or system under the operating conditions shown above becomes the following :

$$f_{s} = \frac{C_{0}}{353.4 \text{kg}} = \frac{9004}{353.4} = 25.48$$

(5) Mean Load Pmn

$$P_{\text{MA}} = \sqrt[3]{\frac{1}{2\,\ell\,\text{s}}\,(\,\text{Peau}^{\,3}\,\ell_{\text{s}}^{\,+}\,\text{PeaD}^{\,3}\,\ell_{\text{s}}^{\,-}\,)} = 300.6\,\text{kg} \quad P_{\text{mc}} = \sqrt[3]{\frac{1}{2\,\ell\,\text{s}}\,(\,\text{Pecu}^{\,3}\,\ell_{\text{s}}^{\,+}\,\text{PecD}^{\,3}\,\ell_{\text{s}}^{\,-}\,)} = 300.6\,\text{kg}$$

$$P_{\text{MB}} = \sqrt[3]{\frac{1}{2\,\ell\,\text{s}}\,(\,\text{Pebu}^{\,3}\,\ell_{\text{s}}^{\,+}\,\text{PebD}^{\,3}\,\ell_{\text{s}}^{\,-}\,)} = 300.6\,\text{kg} \quad P_{\text{mD}} = \sqrt[3]{\frac{1}{2\,\ell\,\text{s}}\,(\,\text{Pebu}^{\,3}\,\ell_{\text{s}}^{\,+}\,\text{PebD}^{\,3}\,\ell_{\text{s}}^{\,-}\,)} = 300.6\,\text{kg}$$

(6) Nominal life L_n (Assume f_w = 1.2)

$$L_{A} = (\frac{C}{f_{w} \cdot P_{mA}}^{3}) \cdot 50 \text{ km} = 117148.8 \text{ km}$$

$$L_{B} = (\frac{C}{f_{w} \cdot P_{mB}}^{3}) \cdot 50 \text{ km} = 117148.8 \text{ km}$$

$$L_{D} = (\frac{C}{f_{w} \cdot P_{mB}}^{3}) \cdot 50 \text{ km} = 117148.8 \text{ km}$$

ABOUT LINEAR GUIDE

1-9 Accuracy

■ 1-9-1 Accuracy Standards

The accuracy of rail is determined by the tolerance of its parallelism, height and width, if there is multiple blocks on a rail or multiple Linear Guide on a surface, the difference of height and width between each block and Linear Guide are standardized and shown in the catalogue.

Running Parallelism

Mount a Linear Guide on a datum surface and measure the parallelism difference of block while operating its full travel distance.

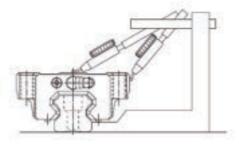


Fig 1.9.1 Running Parallelism

Difference in Height M among Linear Guide Blocks

On the same datum surface, the difference between maximum and minimum height of each block.

Difference in Rail-to-Block Lateral Distance W2 among Linear Guide Blocks

On the same rail, the difference between maximum and minimum width of each block.

: Note.1

With two or more sets of Linear Guide installed in parallel on the same plane, the tolerance for the rail-to-block lateral distance (W2) and the differences therein among Linear Guide blocks apply to the master – rail side only.

XNote.2

Accuracy measurements indicate mean values of measurements taken at the center or central area of each Linear Guide block.

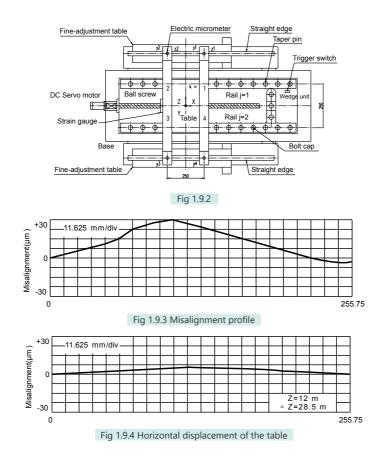
₩Note.3

Linear Guide rails are smoothly curved so that when they are installed on a machine they are easily straightened, and pressing them onto the machine reference base enables the design accuracy to be achieved. If installed on a base lacking rigidity, such as an aluminum base, the bend of LinearGuide rails may affect machine precision. In such a case, the straightness should be set in advance.

■ 1-9-2 Averaging Effect

The Linear Guide incorporates precision balls with high circularity, enabling a constrained structure with no clearance. Moreover, in a multiple-axis configuration with the axis arranged in parallel to one another, the component Linear Guides therein combine to form an entire constrained guideway.

The effect of equalization is different, due to the error of length, size, preload of rail, axis constrained structure and etc, as the table shown below; adding one rail a straightness error and its actual operating accuracy is shown in the diagram below. Through the feature of equalization, a high operating accuracy structure can be provided.



1-10 Predicting the Rigidity

■ 1-10-1 Determining Radial Clearance and the Magnitude of a Preload Radial Clearance

The radial clearance of the Linear Guide is the displacement of Linear Guide block caused by the vertical plane when the block is lightly pushed forward or backward at the longitudinal center of the Linear Guide rail secured in place.

The radial clearance is divided into ZF (Slight Clearance), Z0 (No Preload), Clearance Z1 (light preload), Z2 (medium preload) and Z3 (heavy preload).The most appropriate clearance can be selected in accordance with the intended applications. The radial clearances and preload values are standardized for each type of Linear Guide.

The radial clearance of the Linear Guide significantly affects its running precision, load-withstanding performance, and rigidity. It is therefore particularly important to select the correct clearance for your purpose. In generally, a negative clearance has a favorable effect on service life and precision, if the Linear Guide is subjected to significant vibration and impact due to reciprocal motion.

Preload

The preload is an internal load exerted on rolling elements in the Linear Guide block, for the purpose of increasing the block rigidity and reducing clearance. Clearance symbol for the Liner Guide, ZF, ZO, Z1, Z2 and Z3 represent negative clearance resulting from a preload and are expressed in negative values. All Linear Guide models (excluding the separate type) are shipped with their clearance adjusted to user specifications. Therefore, it is not necessary for users to adjust the preload themselves. We will select the clearance suited to your operating conditions. Please contact us.

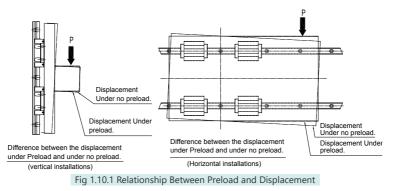


Table 1.	10.1									
\backslash	Preload									
	ZF~Z0 Slight Clearance, Zero Preload.	Z1 Zero Clearance, Light Preload.	Z2 Zero Clearance, Medium preload.							
OperatingConditions	The loading direction is fixed; impact and vibration are slight; two axes are installed in parallel. High precision is not required and the sliding resistance must be low.	The location in under an overhang and a moment load. The Linear Guide is used in a one-axis configuration. The location with light load and high precision requirement.	The location requires light rigidity and is subjected to vibration and impact. The application is a heavy- cutting machine tool or the like.							
SampleApplications	 Beam-welding machine. Book-binding machine. Automatic packing machine. General-industrial-machine X-axis and Y-axis. Automatic sash-bar finishing machine. Welding machine. Circuit breaker. Tool changer. Various kinds of maternal feedeer. 	 Grinding-machine table feed shaft. Automatic painting machine. Industrial robot. Various kinds of high-speed material feeder. NC drilling machine. General-industrial-machine Z-axis. Printed-cricuit-board drilling machine. Electric discharge machine. Measuring instrument. Precision XY table. 	 Machining center. NC lathe. Grinding-machine grinding- wheel feed shaft. Milling machine. Vertical-and horizontal- boring machines. Tool rest guide. Machine-tool Z-axis. 							

Applied Load and Service Life Considering

When the Linear Guide is used under a preload (medium), the Linear Guide block receives an internal load. Therefore, the service life should be calculated in consideration of the preload. For preload considerations, please contact us, specifying the model numbers you have selected.

■ 1-10-2 Rigidity

When the Linear Guide receives a load, the steel balls, Linear Guide blocks, and rails undergo elastic deformation within a permissible range. The ratio of deformation to the load is the rigidity value. The rigidity of the Linear Guide increases as the preload increases. The Fig below shows the differences among the ordinary clearance Z1 and clearance Z2, Z3. As shown, in the case of the four-way equal-load type, the effect of preloading remains valid until the load increases to some 2.8 times the preload applied.

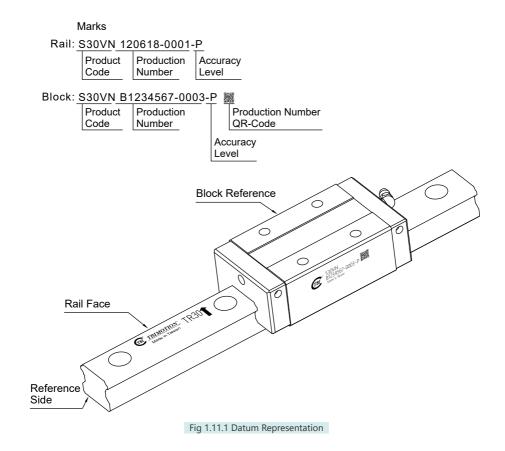


$$\begin{split} & \mathsf{K} = \frac{\mathsf{P}}{\delta} \\ & \delta : \mathsf{Displacement} \; (\mu\mathsf{m}) \\ & \mathsf{P} : \mathsf{Load} \; (\mathsf{kg}) \\ & \mathsf{K} : \mathsf{Rigidity} \; \mathsf{Value} \; (\mathsf{kg}/\mu\mathsf{m}) \end{split}$$

1-11 Installation of Linear Guide


■ 1-11-1 Datum Representation

The reference side of a rail is pointed by the \uparrow at the end of TBI label, and the reference side for a carriage is at the opposite side TBI label, please see the picture below :



■ 1-11-2 Recognizing of Master Rail

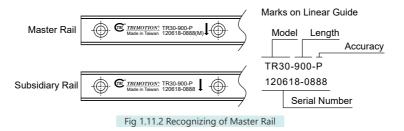Linear rails to be applied on the same plane are all marked with the same serial number, and "M" is marked at the end of serial number for indicating the master rail, shown as the figure below. The reference side of carriage is the surface where is ground to a specified accuracy. For normal grade (N), it has no mark "M" on rail which means any one of rails with same serial number could be the master rail.




Combined Use of Rail and Carriage

For combined use, the rail and carriage must have the same serial number. When reinstalling the carriage back to the rail, make sure they have the same serial number and the reference side of carriage should be in accordance with that of rail.

1-11 Installation of Linear Guide

■ 1-11-3 For Butt-joint Rail

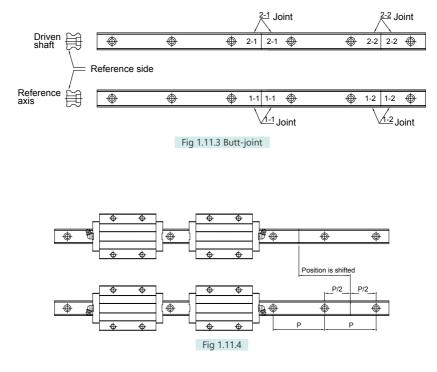
Accuracy may deviate at joints when carriages pass the joint simultaneously. Therefore, the joints should be interlaced for avoiding such accuracy problem.



■ 1-11-4 Mounting Methods

Linear rail is designed to absorb the load of four dimensions; therefore, it can be mounted according to the load and structure of the equipment.

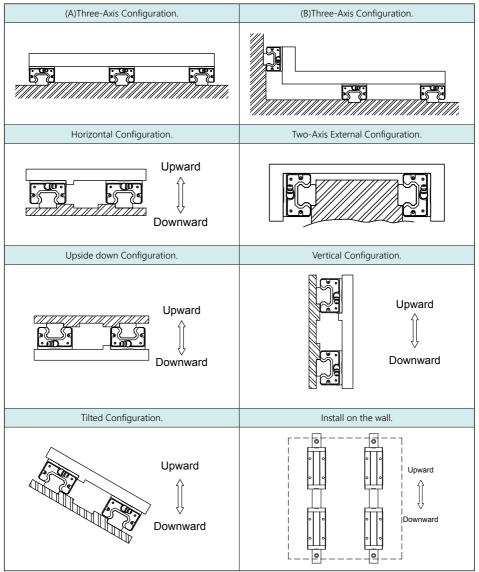
Table 1.11.1



1-11 Installation of Linear Guide

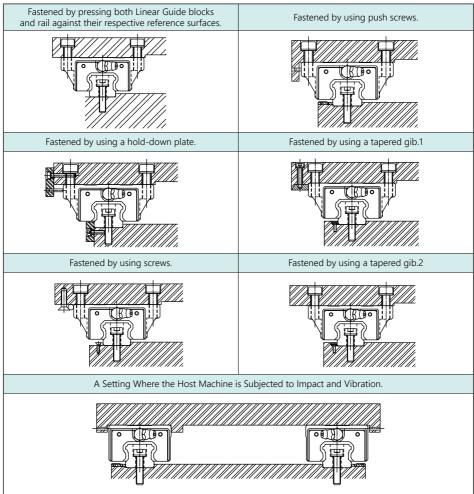
■ 1-11-5 Common Fastening Method of Linear Guide





■ 1-11-6 Mounting the Linear Guide

Mounting Procedures



* Sample Installation of the Linear Guide on a Vibration-and-Impact Susceptible Machine that Requires Rigidity and High Precision.

Fig 1.11.5 Mounting the Linear Guide on a Machine Susceptible to Vibration and Impact

Mounting the Linear Guide Rail

(A) Prior to assembly, always remove all burrs, dents and dust that are likely to form on the mounting surface of the machine on which Linear Guide is to be installed. (Fig 1.11.6) CAUTION : The Linear Guide is delivered with an anticorrosive oil applied. Prior to assembly, be sure to remove the oil from the reference surface using a wash oil. If the anticorrosive oil is removed, the surface is likely to rust. The application of a low-viscosity spindle oil or the like is therefore recommended.

(B) Gently place a Linear Guide rail on the base, and temporarily tighten the bolts so that the rail lightly contacts the mounting surface. Hold the line marked side of the Linear Guide rail against matching the base-side reference surface (Fig 1.11.7)

CAUTION : Use clean bolts to fasten the Linear Guide. When inserting bolts into the Linear Guide rail mounting holes, make sure the threads of the bolt and nut are properly aligned. (Fig 1.11.8)

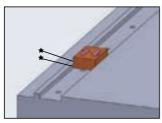


Fig 1.11.6 Checking the Mounting Surface.

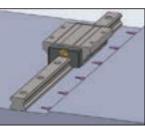


Fig 1.11.7 Holding an Linear Guide rail against the Reference Surface

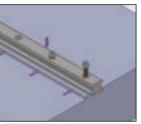


Fig 1.11.8 Checking Bolt Play

1-11 Installation of Linear Guide

Table 1.11.5 Tighterning			
ModelNo.		TighteningTorque	
wodenito.	Iron	Casting	Aluminum
M2	57	39.2	29.4
M2.3	78.4	53.9	39.2
M2.6	118	78.4	58.8
M3	186	127	98.0
M4	392	274	206
M5	882	588	441
M6	1370	921	686
M8	3040	2010	1470
M10	6760	4510	3330
M12	11800	7840	5880
M14	15700	10500	7840
M16	19600	13100	9800
M20	38200	25500	19100
M22	51900	34800	26000
M24	65700	44100	32800
M30	130000	87200	65200

Table 1.11.3 Tightening Torque for Allen Bolt

Unit : N-cm

(C) Tighten the Linear Guide rail set screws in sequence, until they lightly contact the rail-mounting side surface.(Fig 1.11.9)

(D) Using a torque wrench, tightening the mounting bolts to the specific torque.(Fig 1.11.10) CAUTION : The sequence for tightening the Linear Guide rail mounting bolts should start from the center to the end. Following this sequence to maintain accuracy.

(E) Following the same procedures for the remaining Linear Guide rails, complete Linear Guide rail installation.

 $(\ensuremath{\mathsf{F}})$ Drive caps into the bolt holes on the Linear Guide rails so that they are flush with the rail top surface.

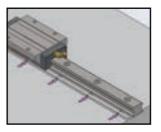


Fig 1.11.9 Tightening Set Screws

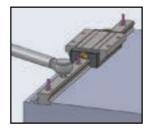


Fig 1.11.10 Full Tightening of Mounting Bolts

Mounting the Linear Guide Block

(A) Gently place a table on the Linear Guide blocks and temporarily tighten the mounting bolts.

(B) Using set screws, hold the master-rail Linear Guide block against the table reference-side surface, and position the table.

(C) Fully tighten the mounting bolts on both the master and subsidiary sides. This completes Linear Guide block installation.

CAUTION : To ensure uniform fastening of the table, tighten the mounting bolts diagonally, as shown in (Fig 1.11.11) in accordance with the numbers.

(D) Using a torque wrench, tightening the mounting bolts to the specified torque.(Fig 1.11.10) CAUTION : The sequence for tightening the Linear Guide rail mounting bolts should start from the center to the end. Following this sequence to maintain.

The method specified above minimizes the time required to ensure the straightness of the Linear Guide-rail. Moreover, there is no need to use the fastening knock pins, thereby greatly reducing the required assembly man-hours.




Fig 1.11.11

* Sample Installation of the Linear Guide without Set Screws on the Master Linear Guide Rail




Fig 1.11.12 Mounting the Linear Guide without Set Screws on the Master Linear Guide Rail

ABOUT LINEAR GUIDE

1-11 Installation of Linear Guide

Mounting the Master Linear Guide Rail

After temporarily tightening the mounting bolts, use a small device or the like to firmly press the rail to the side, against the reference section. Fully tighten the mounting bolts. Repeat this for each mounting bolt in sequence. (Fig 1.11.13)

Mounting the Subsidiary Linear Guide Rail

To ensure parallelism of the subsidiary Linear Guide rail with the master Linear Guide rail properly mounted, the following methods are recommended.

Use a Straight Edge

Position a straight edge between the two rails then confirm parallelism with a dial gauge. Using the straight edge as a reference to confirm subsidiary rail straightness from one end to the other, tightening the mounting bolts in sequence as you go. (Fig 1.11.14)

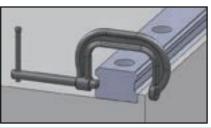


Fig 1.11.13 Mounting the master Linear Guide rail



Fig 1.11.14 Use a straight edge

A

Move the Table

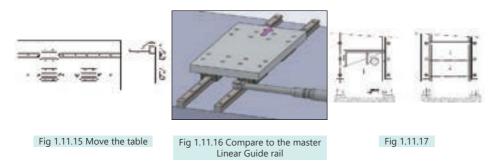
Fasten two Linear Guide blocks on the master side to the table (or a temporary measurement table). Temporary fasten the subsidiary Linear Guide rail and block to the base and table. From the dial-gauge stand, with a dial gauge contact the subsidiary rail Linear Guide block side, move the table from the rail end and check the parallelism between the block and the subsidiary Linear Guide rail, fastening the bolts on sequences as you go. (Fig 1.11.15)

Compare to the Master Linear Guide Rail

Make sure the master Linear Guide rail is properly installed. Temporarily fasten the subsidiary Linear Guide rail in place. Place a table on the Linear Guide blocks mounted on the master rail and on the temporarily fastened subsidiary Linear Guide rail. Fully tighten the mounting bolts on the two Linear Guide blocks on the subsidiary rail. With the remaining Linear Guide block on the subsidiary rail temporarily fastened, correct the position of the subsidiary Linear Guide rail, fully tightening its mounting bolts in sequence as you go. (Fig 1.11.16)

Method Using a Jig

Using a jig as shown in (Fig 1.11.17) confirm parallelism between the master-rail-side reference surface and that of the subsidiary rail at each mounting hole, and fully tighten the mounting bolt there.



% Sample Installation of the Linear Guide without a Reference Section for the Master Linear Guide Rail.




Fig 1.11.18 Installation of the Linear Guide without a Reference Section for the Master Linear Guide Rail

ABOUT LINEAR GUIDE

1-11 Installation of Linear Guide

Mounting the Master Linear Guide Rail

Use a Temporary Reference Surface from end to end to acquire Linear Guide rail straightness. For this method, however, two Linear Guide block must be fastened together, positioned on the top of each other while attached to a measurement plate, as shown in (Fig1.11.19).

Use a Straight Edge

After temporarily tightening the mounting bolts, use a dial gauge to check the straightness of the Linear Guide-rail-side reference surface from end to end, fully tightening the mounting bolts in sequence as you go, as shown in (Fig 1.11.20).

To mount the subsidiary Linear Guide rail, follow the procedures specified in the second paragraph on the previous page.



Fig 1.11.19 Use a Temporary Reference Surface

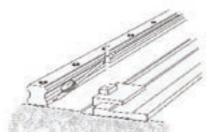


Fig 1.11.20 Use a Straight Edge

Shoulder Heights and Chamfers

Improper shoulder heights and chamfers of mounting surfaces will cause deviations in accuracy and rail or block interference with the chamfered part. When recommended shoulder heights and chamfers are used, problems with installation accuracy should be eliminated.

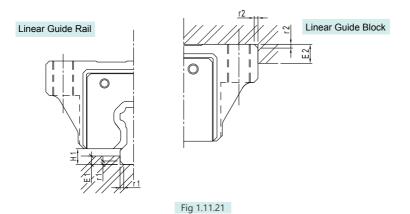


Table 1.11.4 SI	houlder Heigh	t and	Chamfer
-----------------	---------------	-------	---------

Unit : mm

Model No.	Max.chamfer of the rail r1	Max.chamfer of the block r2	Max.chamfer of the rail E1	Max.chamfer of the rail E2	Max.chamfer of the block H1	
TR15	0.5	0.5	3	4	3.2	
TR20	0.5	0.5	3.5	5	4.6	
TR25	1.0	0.9	5	5	5.8	
TR30	1.0	1	5	5	7	
TR35	1.0	1	6	6	7.5	
TR45	1.0	1	8	8	8.9	
TR55	TR55 1.5		10	10	13	
TR65	1.5	1.5	8	10	14.3	

ABOUT LINEAR GUIDE

1-12 Lubrication

Lubrication

Lubrication is essential to linear motion system. Without lubrication, the friction of rolling parts increases and might be the main factor of service life shortening.

A lubricant :

(1) Reduces friction on moving parts, thereby to prevent wearing due to raise in temperature.

(2) Forms an oil film on rolling surfaces, thus decreasing stress that develops on the surfaces and safeguarding the system against rolling fatigue.

(3) Covers metal surfaces with an oil film, thereby preventing rust.

To tap the full function of a linear motion system, lubrication is essential to meet the system service conditions.

* Even the linear motion system is sealed, it cannot completely prevent the leakage of lubricants no matter how negligible the amount of leakage is at any given time. It is therefore necessary to replenish the lubricant periodically according to the operating conditions.

Classification of Lubricants

Primarily grease and sliding surface oil are used as lubricants for linear motion systems.

In general a lubricant must :

- (1) Form a strong oil film.
- (2) Reduce wear as much as possible.
- (3) Have high wear resistance.
- (4) Have high thermal stability.
- (5) Be non-corrosive.
- (6) Be highly rust-preventive.
- (7) Be free from dust and some moisture.
- (8) Be free from significant fluctuations in consistency against repeated agitation of grease.

Table1.12.1 Lubricants in General Use

Lubricant	Classification	Item
Grease	Lithium-based grease (JIS No.2) Urea-base grease (JIS No.2)	※4FB Grease (TBI MOTION) Daphne Eponex Grease No.2 (Idemitsu Kosan) or equivalent.
Oil	Sliding surface oil or turbine oil ISO VG32~68	Super Multi 32 to 68 (Idemitsu Kosan) Vactra No.2S (Mobile Oil) DT Oil (Mobile Oil) Tonner Oil (Showa Shell Sekiyu) or equivalent

*Feeding Should be performed every 100 km of travel under normal usage conditions to prevent incomplete lubrication by exhausted lubrication.

Α

A

1-13 Precautions of Linear Guide

Handling

(1) Tilting the linear guideway may cause the block falling out from the rail by their own weight.

(2) Hitting or Dropping the linear guideway may cause its function to be damaged, even if the product looks intact.

(3) Do not disassemble the block, this may cause contamination to enter into the carriage or decrease the installation accuracy.

Lubrication

(1) Please remove the anti-rust oil.

- (2) Please do not mix different kinds of lubricants.
- (3) Lubrication can be varied, please consult TBI Motion before use.

Usage

(1) The temperature of the place where linear guideways are used should not exceed 80°C. A higher temperature may damage the plastic end cap, do not exceed 100°c in friction.

(2) Using under special conditions, such as constant vibration, high contamination or the temperature exceed our suggested...etc., please contact TBI MOTION.

Storage

When storing the linear guideway, enclose it in a package and store it in a horizontal orientation while avoiding high temperature, low temperature and high humidity.

2-1 The Types of TBI MOTION Linear Guide

In an effort to meet customer's requirement, TBI MOTION offers several different types of guides. Except for TR international standard series, TBI MOTION develops TR series with self lubrication system which is designed for environment with high contamination and miniature TM series for small machines and semiconductor industry.

Туре	Height of Assembly Type	Square	Flange Mounting from Above, Mounting from Below
	High-Assembly	TRH-V	TRH-F
TR	Low-Assembly	TRS-V	TRS-F
	Middle-Assembly	TRC-V	-

Table 2.1.1 TBI MOTION Linear guide table with all series

Table 2.1.2 TBI MOTION Linear Guide - Type & Series

Туре	Accessory	Characteristics	EndCap	
	XN : Strong Bottom Seal+Strong Double-lip end seals			
	XNC : Strong Bottom Seal+Low Resistance End Seal	Strong dust-proof		
	UN : Strong Top Seal+Strong Bottom Seal+Double-lip end seals	Environment with		
	ZN : Strong Top Seal+Strong Bottom Seal+Strong Two Double- lip end seals	high pollution		
	WW : Strong Bottom Seal+Felt+Strong Double-lip end seals	Self-lubrication/		
TR	WU : Strong Top Seal+Strong Bottom Seal+Felt+Strong Double- lip end seals	Strong dust-proof	Reinforcement Type	
	WZ : Strong Top Seal+Strong Bottom Seal+Felt+Strong Two Double-lip end seals	Application with low rating load		
	SU : Strong Top Seal+Strong Bottom Seal+Strong Double-lip end seals+Strong Metal Scraper	Strong dust-proof / Application with		
	SZ : Strong Top Seal+Strong Bottom Seal+Strong Two Double- lip end seals+Strong Metal Scraper	low rating load		
	DU : Strong Top Seal+Strong Bottom Seal+Strong Double-lip end seals+Felt+Strong Metal Scraper	Self-lubrication/ Strong dust-proof /		
-	DZ : Strong Top Seal+Strong Bottom Seal+Strong Two Double- lip end seals+Felt+Strong Metal Scraper	Application with low rating load		
	BN : Strong Bottom Seal+Strong Double-lipendseals+Oil Reservoir	Long effects Self-lubrication/ Strong dust-proof		

#If Strengthen seals and Felt is required, please upgrade the block with enhanced end cap. #XNC(Low Resistance End Seal) can be applied to TR15 to TR30.

2-2 TRH / TRS / TRC International Standard Linear Guide

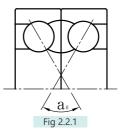
■ 2-2-1 TBI MOTION The Characteristics of TR Series

Smooth Movement

TBI MOTION circulation system of Linear Guide block is designed to perform smooth movement.

High Stability

TBI MOTION Linear Guide block is designed under TBI's exclusive patent that can increases depth of material to improve the strength capacity, prevent deflection and provide high rigidity.



High Durability

TBI MOTION the exclusive contact point design promotes high rigidity. Moreover, self-aligning balances load rating in all directions. This design also improves performance in running accuracy and service life of the Linear Guide.

Easy Installation with Interchangeability

TBI MOTION Linear Guide is easy for installation even without fixture. The design of seal is able to combine with side seal or inner seal to save material.

■ 2-2-2 The Structure of TR-Series

Circulation unit : (1) Block, (2) Rail, (3) End Cap, (4) Steel Balls, (5) Circulation tube.

Lubrication unit : (6) Grease nipple.

Anti-Dust Unit : ⑦ End Seal, ⑧ Bottom Seal, ⑨ Mounting Hole Cap.




Fig 2.2.2

Fig 2.2.2 Material

Item	Material	Hardness		
TR-Rail	\$55C			
TR-Block	SCM420H	– HRC 58°~62°		

2-2 TRH / TRS / TRC International Standard Linear Guide

■ 2-2-3 TR-Series

TBI MOTION offers standard and flange type. The assembly height and category are listed below :

Table 2.2.2

Туре	Model	Shape	Height	Rail Length	Main Application
Standard	TRH-V TRC-V	Mounting from Above	28 ↓ 90	100 4000	 Machine Centers. NC Lathes. Food Machine. Grinding Machines. CNC Machine. Heavy Cutting Machines. Punching Machine. Injection Molding
Stanuaru	TRS-V	Mounting from Above	Machine. • Automation Equipment. • Transportation Equipment. • Sealing machine.		
Flamme	TRH-F	Mounting from above and below	24 ↓ 90	100 4000	
Flange	TRS-F	Mounting from above and below	24 ↓ 60	100 4000	

■ 2-2-4 Nominal Model Code for Non-Interchangeable TR Type

TR series can be classified into Separated and Assembled types. The sizes are identical; the only difference between the two types is that the accuracy of non-interchangeable types could reach up to UP grade since **TBI MOTION** makes the linear guide set under strict international regulation. Interchangeable blocks and rails can be freely exchanged; however, the accuracy could be up to H grade only due to technical issue. It is much more convenient for customers who do not need linear guides with high accuracy to have interchange blocks and rails.

Non-interchangeable Type code :

TRH	20	F	N -	2		1200	- N	- Z0 -	- 11	[- K	+	N3	N3
1 2 3	4	5	6	Ō	8	9	10	Ū.	12	13		14	15
1		2			3				4				
Nominal Mode	I	Bloc	k Type		Heig	ht of As	sembly	/ Туре	Di	mension	I		
Т		R : S	tandard		S : Lo	w-Assem	bly		15,	20, 25, 3	0, 35, 4	45, 55, 65	5
		X : S	pecial		C : M	iddle-Ass	embly						
					H : Hi	igh-Asser	nbly						
5		6			1				8				
Flange Type		Leng	gth of B	lock	Num	ber of B	lock P	er Rail	Ac	cessory	Code		
F : With Flange		S : S	hort		EX : 2	1				Standard	(Pleas	se refer t	0
V : Without Flang	e	N : N	Vormal						pa	ge A58)			
		L:Lo	ong		_								
		E : E>	xtra-Long)									
9	10			Ð		12				13			
Length of Rail	Accu	racy (Grade	Pre	load		Two	Sets per	Axis Rail Special Machining				
Unit : mm	N : N	ormal		ZF :	Slight	Clearance	learance II			□ : Mounting from Top			
	H : Hi	gh		Z0 :	: No Pre	eload			K : Mounting from Bottom			tom	
	P:Pre	ecisior	۱	Z1 :	Light P	reload				X : Rail	with Sp	pecial Ma	achining
	SP : S	uper-f	Precision	Z2 :	Mediu	m Preloa	b						
	UP : L	Jltra-P	recision	Z3 :	Heavy	Preload	_						
14						(15)							
Block Surface T	reatm	ent				Ra	il Surfa	ace Treatm	ent				
S : Standard						S :	Standa	rd					
B1 : Black Oxidati	on					B1	: Black	Oxidation					
N1 : Hard Chrome	e Platin	g				N1	: Hard	Chrome Pla	ting				
P : Phosphating						Ρ:	Phospł	nating					
N3 : Nickel Platin	g					N3	N3 : Nickel Plating						
N4 : Raydent							N4 : Raydent						
N5 : Chrome Plat	ing					N5	: Chroi	me Plating					
V No symbol roquiro	d when r	Jating	is not noor	bob									

%No symbol required when plating is not needed.

TBI MOTION LINEAR GUIDE

2-2 TRH / TRS / TRC International Standard Linear Guide

■ 2-2-5 Nominal Model Code for Interchangeable TR Type

Interchangeable Type of Block :

Т	R	Η	20	F	Ν	-		-	Ν	-	ZO	+	B1
			4				7		8		9		10

1	2	3		4	
Nominal Model	Block Type	Height of Assemb	oly Type	Dim	ension
Т	R : Standard	S : Low-Assembly		15, 20), 25, 30, 35, 45, 55, 65
	X : Special	C : Middle-Assembly	ý		
		H : High-Assembly			
5	6	$\overline{\mathcal{D}}$	8		9
Flange Type	Length of Block	Accessory Code	Accuracy G	rade	Preload
F : With Flange	S : Short	🗆 : Standard	N : Normal		ZF : Slight Clearance
V : Without Flange	N : Normal				Z0 : No Preload
	L : Long				
	E : Extra-Long				

10

U
Block Surface Treatment
🗆 : Standard
B1 : Black Oxidation
N1 : Hard Chrome Plating
P : Phosphating
N3 : Nickel Plating
N4 : Raydent
N5 : Chrome Plating


Interchangeable Type of Rail :

T R	20	- 4000	- N	I - K	(+	B1		
 1 2	 3	4	5	6)	1		
1		2		3				4
Nominal Mo	odel	Block Typ	e	Dimens	ion			Length of Rail
Т		R : Standar	b	15, 20, 2	5, 30, 35	5, 45, 55,	65	Unit : mm
		X : Special						
5		6				(7)	
Accuracy G	rade	Rail Spe	ecial Ma	chining		R	ail Surfa	ce Treatment
N : Normal		🗆 : Mour	nting fro	n Top			: Standar	ď
		K : Mour	nting from	n Bottom		В	1 : Black C	Dxidation
		X : Rail w	ith Spec	ial Machi	ning	N	1 : Hard C	Chrome Plating
						P	: Phosph	ating
						N	3 : Nickel	Plating
						N	4 : Rayde	ent
						N	5 : Chron	ne Plating

TBI MOTION LINEAR GUIDE


2-2 TRH / TRS / TRC International Standard Linear Guide

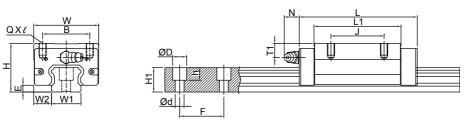
TRH-V Series Specifications



Model No.	Asse	mbly	(mm)				Bloc	k Dim	ension (mm)				R	ail (ı	mm)	
Model No.	н	W2	E	w	В	J	L	L1	QX	T1	Oil Hole	Ν	W1	H1	ØD	h	Ød	F
TRH15VN	28	9.5	3.2	34	26	26	56.9	39.5	M4X8	9.5	M4X0.7	7	15	13	7.5	6	4.5	60
TRH15VL	20	9.5	3.2	54	20	20	65.4	48	101470	9.5	1014X0.7	<i>'</i>	15	15	7.5	0	4.5	60
TRH20VN	30	12	4.6	44	32	36	75.6	54	M5X7	6.5	M6X1	14	20	16.5	9.5	8.5	6	60
TRH20VE	50	IZ	4.0	44	52	50	99.6	78	IVI3A7	0.5	IVIOAT	14	20	10.5	9.5	0.5	0	00
TRH25VN	40	12.5	5.8	48	35	35	81	59	M6X8	11.5	M6X1	14	23	20	11	9	7	60
TRH25VE	40	12.5	5.0	40	55	50	110	88	IVIOAO	11.5	IVIOAT	14	25	20	11	9	1	00
TRH30VN	45	16	7	60	40	40	96.3	69.3	M8X10	11	M6X1	14	28	23	14	12	9	80
TRH30VE	45	10	1	00	40	60	132	105	INIOX IU	11	IVIOAT	14	20	23	14	12	9	00
TRH35VN	55	18	7.5	70	50	50	109	79	M8X10	15	M6X1	14	34	26	14	12	9	80
TRH35VE	55	10	7.5	70	50	72	153	123	INIOX IU	15	IVIOAT	14	54	20	14	12	9	00
TRH45VL	70	20.5	8.9	85.5	60	60	140	106	M10X15	20.5	PT1/8	12.5	45	32	20	17	14	105
TRH45VE	70	20.5	0.9	05.5	00	80	174	140		20.5	P11/0	12.5	45	52	20	17	14	105
TRH55VL	80	23.5	13	100	75	75	162	118	M12X18	21	PT1/8	12.5	53	44	23	20	16	120
TRH55VE	00	23.3	13	100	15	95	200.1	156.1	1112710		FII/0	12.5	55	44	23	20	01	120
TRH65VL	90	31.5	14	126	76	70	197	147	M16X20	19	PT1/8	12.5	63	53	26	22	18	150
TRH65VE	90	51.5	14	120	70	120	256.5	206.5	IVI IOX20	19	F11/0	12.5	03	55	20	22	10	150

% The above specifications provided are dedicated to XN, UN, please check table 2.10.1 for detail, if other accessories is required, please refer to page A86.






	Load I	Rating		Static Pe	rmissible M	oment		Wei	ight
Model No.	(kg	gf)	Mx (kg-mm)	My (ke	g-mm)	Mz (kę	g-mm)	Block	Rail
	С	Co	Single Block	Single Block	Double Block	Single Block	Double Block	(kg)	(kg/m)
TRH15VN	1206	2206	16,436	14,884	70,960	14,884	70,960	0.15	1.32
TRH15VL	1343	2574	19,175	20,429	95,224	20,429	95,224	0.22	1.52
TRH20VN	2050	3696	37,334	33,268	157,298	33,268	157,298	0.31	2.28
TRH20VE	2553	5058	51,089	63,229	284,163	63,229	284,163	0.44	2.20
TRH25VN	2581	4503	52,239	43,407	207,324	43,407	207,324	0.52	3.17
TRH25VE	3248	6255	72,554	85,112	391,311	85,112	391,311	0.77	5.17
TRH30VN	3807	6483	90,722	74,970	355,321	74,970	355,321	0.85	4.54
TRH30VE	4791	9004	126,003	147,000	677,068	147,000	677,068	1.3	4.54
TRH35VN	5090	8346	142,722	106,070	519,799	106,070	519,799	1.47	6.27
TRH35VE	6667	12274	209,885	233,977	1,070,533	233,977	1,070,533	2.26	0.27
TRH45VL	7572	12808	292,657	220,751	1,030,183	220,751	1,030,183	3.00	10.4
TRH45VE	8852	16010	365,821	348,554	1,598,703	348,554	1,598,703	3.90	10.4
TRH55VL	14703	21613	571,342	411,729	2,019,184	411,729	2,019,184	4.42	16.1
TRH55VE	17349	27377	723,699	670,530	3,148,637	670,530	3,148,637	5.50	10.1
TRH65VL	22526	31486	973,074	695,840	3,594,277	695,840	3,594,277	8.66	22.54
TRH65VE	27895	42731	1,320,601	1,307,568	6,312,759	1,307,568	6,312,759	10.30	22.54


2-2 TRH / TRS / TRC International Standard Linear Guide

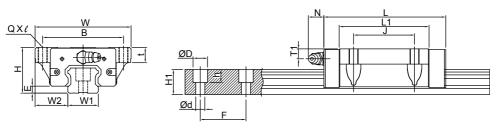
TRH-F Series Specifications



Model	Assei	mbly	(mm)					Block	Dime	nsion (m	nm)				F	Rail (mm)	
No.	н	W2	E	w	В	J	t	L	L1	QX	T1	Oil Hole	Ν	W1	H1	ØD	h	Ød	F
TRH15FN	24	16	3.2	47	38	30	8	56.9	39.5	M5X8	5.5	M4X0.7	7	15	13	7.5	6	4.5	60
TRH15FL	24	10	5.2	47	20	50	0	65.4	48	OVCIVI	5.5	101470.7	/	15	15	1.5	0	4.5	00
TRH20FN	30	21.5	4.6	63	53	40	10	75.6	54	M6X10	6.5	M6X1	14	20	16.5	9.5	8.5	6	60
TRH20FE	50	21.5	4.0	05	55	40	10	99.6	78		0.5		14	20	10.5	9.5	0.5	0	00
TRH25FN	36	23.5	5.8	70	57	45	12	81	59	M8X12	7.5	M6X1	14	23	20	11	9	7	60
TRH25FE	50	25.5	5.0	10	57	45	12	110	88	IVIOA IZ	1.5		14	25	20	11	9	[′]	00
TRH30FN	42	31	7	90	72	52	15	96.3	69.3	M10X15	8	M6X1	14	28	23	14	12	9	80
TRH30FE	42	51	/	90	12	52	15	132	105		0		14	20	25	14	12	9	80
TRH35FN	48	33	7.5	100	82	62	15	109	79	M10X15	8	M6X1	14	34	26	14	12	9	80
TRH35FE	40	22	7.5	100	02	02	CI	153	123		0		14	54	20	14	12	9	00
TRH45FL	60	37.5	8.9	120	100	80	18	140	106	M12X18	10.5	PT1/8	12.5	45	32	20	17	14	105
TRH45FE	60	37.5	8.9	120	100	80	18	174	140	IVI 12X 18	10.5	P11/8	12.5	45	32	20	1/	14	105
TRH55FL	70	40 F	10	140	110	0.5	20	162	118	N 41 41/17	11	DT1/0	10 F	50	44	23	20	10	120
TRH55FE	70	43.5	13	140	116	95	29	200.1	156.1	M14X17	11	PT1/8	12.5	53	44	23	20	16	120
TRH65FL	00	53.5	14	170	142	110	27	197	147	MICVOO	10	DT1/0	10 F	62	52	26	22	10	150
TRH65FE	90	53.5	14	170	142	110	3/	256.5	206.5	M16X23	19	PT1/8	12.5	63	53	26	22	18	150

*The above specifications provided are dedicated to XN, UN, please check table 2.10.1 for detail, if other accessories is required, please refer to page A86.






	Load I	Rating		Static Pe	rmissible M	oment	•	W	eight
Model No.	(kạ	gf)	Mx (kg-mm)	My (kợ	g-mm)	Mz (k	g-mm)	Block	Rail
	с	Co	Single Block	Single Block	Double Block	Single Block	Double Block	(kg)	(kg/m)
TRH15FN	1206	2206	16,436	14,884	70,960	14,884	70,960	0.18	1.32
TRH15FL	1343	2574	19,175	20,429	95,224	20,429	95,224	0.22	1.52
TRH20FN	2050	3696	37,334	33,268	157,298	33,268	157,298	0.39	2.20
TRH20FE	2553	5058	51,089	63,229	284,163	63,229	284,163	0.58	2.28
TRH25FN	2581	4503	52,239	43,407	207,324	43,407	207,324	0.60	2.17
TRH25FE	3248	6255	72,554	85,112	391,311	85,112	391,311	0.85	3.17
TRH30FN	3807	6483	90,722	74,970	355,321	74,970	355,321	1.01	4.5.4
TRH30FE	4791	9004	126,003	147,000	677,068	147,000	677,068	1.54	4.54
TRH35FN	5090	8346	142,722	106,070	519,799	106,070	519,799	1.47	C 27
TRH35FE	6667	12274	209,885	233,977	1,070,533	233,977	1,070,533	2.29	6.27
TRH45FL	7572	12808	292,657	220,751	1,030,183	220,751	1,030,183	2.80	10.4
TRH45FE	8852	16010	365,821	348,554	1,598,703	348,554	1,598,703	3.79	10.4
TRH55FL	12598	14798	571,342	411,729	2,019,184	411,729	2,019,184	4.22	16.1
TRH55FE	15404	19731	723,699	670,530	3,148,637	670,530	3,148,637	5.6	16.1
TRH65FL	20254	23098	973,074	695,840	3,594,277	695,840	3,594,277	9.31	22.54
TRH65FE	24777	30797	1,320,601	1,307,568	6,312,759	1,307,568	6,312,759	12.98	22.54


2-2 TRH / TRS / TRC International Standard Linear Guide


TRS-V Series Specifications



	Asse	mbly(mm)				Bloc	k Dim	ension(r	nm)					Rail(mm)		
Model No.	н	W2	E	w	В	J	L	L1	QXℓ	T1	Oil Hole	N	W1	H1	ØD	h	Ød	F
TRS15VS	24	9.5	3.2	34	26	\square	40.3	22.9	M4X5	5.5	M4X0.7	7	15	13	7.5	6	4.5	60
TRS15VN	24	9.5	3.2	54	20	26	56.9	39.5	101473	5.5	101470.7		15	15	1.5	0	4.5	00
TRS20VS	28	11	4.6	42	32		49.4	27.8	M5X6	4.5	M6X1	14	20	16.5	9.5	8.5	6	60
TRS20VN	20		4.0	42	52	32	68.3	46.7		4.5		14	20	10.5	9.5	0.5	0	00
TRS25VS	33	12.5	5.8	48	35		57.2	35.2	M6X6.5	4.5	M6X1	14	23	20	11	9	7	60
TRS25VN	22	12.5	5.0	40	55	35	81	59		4.5		14	25	20		9	<i>'</i>	00
TRS30VS	42	16	7	60	40	\square	67.4	40.4	M8X8	8	M6X1	14	28	23	14	12	9	80
TRS30VN	42	10	1	00	40	40	96.3	69.3	IVIOAO	0		14	20	25	14	12	9	00
TRS35VN	48	18	7.5	70	50	50	109	79	M8X8	8	M6X1	14	34	26	14	12	9	80
TRS35VE	40	10	<i>1.</i> 5	/0	50	72	153	123		0		14	54	20	14	ιZ	9	00
TRS45VN	60	20.5	8.9	85.5	60	60	124.5	90.5	M10X15	10.5	PT1/8	12.5	45	32	20	17	14	105

* The above specifications provided are dedicated to XN, UN, please check table 2.10.1 for detail, if other accessories is required, please refer to page A86.






				Static P	ermissible N	/loment		Wei	ight
Model No.		Rating gf)	Mx (kg-mm)	My (k	g-mm)	Mz (kg	g-mm)	Block (kg)	Rail (kg/m)
	с	Co	Single Block	Single Block	Double Block	Single Block	Double Block		
TRS15VS	908	1471	10,957	6,420	33,531	6,420	33,531	0.09	
TRS15VN	1206	2206	16,436	14,884	70,960	14,884	70,960	0.15	1.32
TRS20VS	1398	2140	21,615	10,700	59,798	10,700	59,798	0.15	
TRS20VN	1896	3307	33,404	26,459	126,998	26,459	126,998	0.23	2.28
TRS25VS	1943	3002	34,826	18,725	97,890	18,725	97,890	0.25	
TRS25VN	2581	4503	52,239	43,407	207,324	43,407	207,324	0.39	3.17
TRS30VS	2697	3962	55,442	26,950	154,224	26,950	154,224	0.48	
TRS30VN	3807	6483	90,722	74,970	355,321	74,970	355,321	0.77	4.54
TRS35VN	5090	8346	142,722	106,070	519,799	106,070	519,799	1.15	6.27
TRS35VE	6667	12274	209,885	233,977	1,070,533	233,977	1,070,533	1.54	6.27
TRS45VN	6758	10887	248,758	158,011	782,271	158,011	782,271	1.98	10.4

www.tbimotion.com.tw A69

TBI MOTION LINEAR GUIDE


2-2 TRH / TRS / TRC International Standard Linear Guide

TRS-F Series Specifications




Model No.	Asse	mbly((mm)					Block	Dim	ension	(mm)				Rail(mm)		
Model No.	н	W2	Е	w	В	J	t	L	L1	QXℓ	T1	Oil Hole	Ν	W1	H1	ØD	h	Ød	F
TRS15FS						\square		40.3	22.9										
TRS15FN	24	18.5	3.2	52	41	26	7	56.9	39.5	M5X7	5.5	M4X0.7	7	15	13	7.5	6	4.5	60
TRS20FS						\square		49.4	27.8										
TRS20FN	28	19.5	4.6	59	49	32	9	68.3	46.7	M6X9	4.5	M6X1	14	20	16.5	9.5	8.5	6	60
TRS25FN	33	25	5.8	73	60	35	10	81	59	M8X10	4.5	M6X1	14	23	20	11	9	7	60

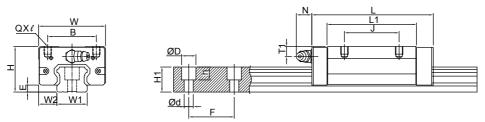% The above specifications provided are dedicated to XN, UN, please check table 2.10.1 for detail, if other accessories is required, please refer to page A86.




Model No.	Asse	mbly(mm)				Blo	ck E)imension(mm)				Rail(mm)		
	н	W2	Ε	W B J L L1 QX T1 Oil Hole						Ν	W1	H1	ØD	h	Ød	F		
TRC25VE	36	12.5	5.8	48	35	50	110	88	M6X6.5	7.5	M6X1	14	23	20	11	9	7	60

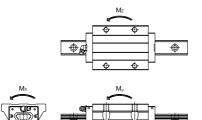
**The above specifications provided are dedicated to XN, UN, please check table 2.10.1 for detail, if other accessories is required, please refer to page A86.



			Contraction of the second seco		•—v—ibr				
				Static P	ermissible N	/loment		Wei	ght
Model No.		Rating gf)	Mx (kg-mm)	My (k	g-mm)	Mz (k	g-mm)	Block (kg)	Rail (kg/m)
	с	Co	Single Block	Single Block	Double Block	Single Block	Double Block		
TRS15FS	908	1471	10.957	6.420	33.531	6.420	33.531	0.12	
			-,	-, -	/	-, -			1.32
TRS15FN	1206	2206	16,436	14,884	70,960	14,884	70,960	0.19	
TRS20FS	1398	2140	21,615	10,700	59,798	10,700	59,798	0.19	
TRS20FN	1896	3307	33,404	26,459	126,998	26,459	126,998	0.29	2.28
TRS25FN	2581	4503	52,239	43,407	207,324	43,407	207,324	0.51	3.17

М×





Model No.	Load Rating		Static Permissible Moment					Weight	
		gf) Co	Mx (kg-mm)	My (kg-mm)		Mz (kg-mm)		Block	Rail
	С		Single Block	Single Block	Double Block	Single Block	Double Block	(kg)	(kg/m)
TRC25VE	3248	6255	72,554	85,112	391,311	85,112	391,311	0.65	3.17

2-3 The Standard Length and Maxima Length of Linear Rail

TBI MOTION offer our customers standard and customized rail length to meet the requirement of our customers. TBI suggests that when ordering customized rail length, to prevent unstable running performance after mounting, the end cap value G should be no greater than 1/2F.

 $L = [n-1] \cdot F + 2 \cdot G$

- L : Total Length of Rail (mm)
- n : Number of Mounting Holes
- F : Distance Between Any Two Holes (mm)
- G : Distance from the Center of the Last Hole to the Edge (mm)




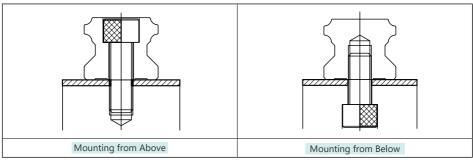



Table 2.3.1									
Item	TR15	TR20	TR25	TR30	TR35	TR45	TR55	TR65	
F : Pitch	60	60	60	80	80	105	120	150	
G : Suggested Distance to End	20	20	20	20	20	22.5	30	35	
L : Max. Length	4000	4000	4000	4000	4000	4000	4000	4000	

■ 2-4 Mounting Type of Linear Rail

Besides the standard top mounting type, TBI MOTION also offers bottom mounting type rails.

Table 2.4.1








Table 2.4.2 Rail Size Chart Unit : r							
	M h		E	F			
TR15	M5×0.8	8	20	60			
TR20	M6×1	10	20	60			
TR25	M6×1	12	20	60			
TR30	M8×1.25	15	20	80			
TR35	M8×1.25	17	20	80			
TR45	M12×1.75	24	22.5	105			
TR55	M14×2	24	30	120			
TR65	M20×2.5	30	35	150			

2-5 Accuracy Standard

The accuracy standards of TR-Series range, from normal (N), high (H), precision (P), super-precision (SP) and ultra-precision (UP). It allows our user to choose according to the accuracy standards of the equipment.

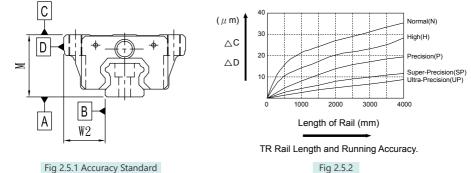


Fig 2.5.1 Accuracy Standard

Table 2.5.1 TR-Accuracy of Running Parallelism

	Accuracy (μm)								
TR Rail Length (mm)	N	Н	P	SP	UP				
0~125	5	3	2	1.5	1				
125~200	5	3.5	2	1.5	1				
200~250	6	4	2.5	1.5	1				
250~315	7	4.5	3	1.5	1				
315~400	8	5	3.5	2	1.5				
400~500	9	6	4.5	2.5	1.5				
500~630	16	11	6	2.5	1.5				
630~800	18	12	7	3	2				
800~1000	20	14	8	4	2				
1000~1250	22	16	10	5	2.5				
1250~1600	25	18	11	6	3				
1600~2000	28	20	13	7	3.5				
2000~2500	30	22	15	8	4				
2500~3000	32	24	16	9	4.5				
3000~3500	33	25	17	11	5				
3500~4000	34	26	18	12	6				

Table 2.5.2

Unit : mm

	Accuracy Standard										
	TR	15 2	0				Т	R 25 3	30 35		
Accuracy Standard	Normal	High	Precision	Super Precision	Ultra Precision	Normal	High	Precision	Super Precision	Ultra Precision	
Item	N	н	Р	SP	UP	N	н	Р	SP	UP	
Tolerance for height M	±0.1	±0.03	0 -0.03	0 -0.015	0 -0.008	±0.1	±0.04	0 -0.04	0 -0.02	0 -0.01	
Tolerance for height M difference among Linear Guide Block	0.02	0.01	0.006	0.004	0.003	0.02	0.015	0.007	0.005	0.003	
Tolerance for rail-to- block lateral distance W2	±0.1	±0.03	0 -0.03	0 -0.015	0 -0.008	±0.1	±0.04	0 -0.04	0 -0.02	0 -0.01	
Tolerance for rail-to- block lateral distance W2 difference among Linear Guide Block	0.02	0.01	0.006	0.004	0.003	0.03	0.015	0.007	0.005	0.003	
Running parallelism of Linear Guide Block surface C with respect to surface A	ΔC, TR	Rail Le	ngth and (Fig 2.5.		Accuracy	Δ C, TR Rail Length and Running Accuracy (Fig 2.5.2)					
Running parallelism of Linear Guide Block surface D with respect to surface B	Δ D, TR	Rail Le	ngth and (Fig 2.5.		Accuracy	Δ D, TR Rail Length and Running Accuracy (Fig 2.5.2)					
			A	Accuracy	Standarc	ł					
	TR	45 5	5				TR 65				
Accuracy Standard	Normal	High	Precision	Super Precision	Ultra Precision	Normal	High	Precision	Super Precision	Ultra Precision	
Item	N	н	Р	SP	UP	N	н	Р	SP	UP	
Tolerance for height M	±0.1	±0.05	0 -0.05	0 -0.03	0 -0.02	±0.1	±0.07	0 -0.07	0 -0.05	0 -0.03	
Tolerance for height M difference among Linear Guide Block	0.03	0.015	0.007	0.005	0.003	0.03	0.02	0.01	0.007	0.005	
Tolerance for rail-to- block lateral distance W2	±0.1	±0.05	0 -0.05	0 -0.03	0 -0.02	±0.1	±0.07	0 -0.07	0 -0.05	0 -0.03	
Tolerance for rail-to- block lateral distance W2 difference among Linear Guide Block	0.03	0.02	0.01	0.007	0.005	0.03	0.025	0.015	0.01	0.007	
Running parallelism of Linear Guide Block surface C with respect to surface A	ΔC, TR	Rail Le	ngth and (Fig 2.5.	9	Accuracy	Δ C, TR Rail Length and Running Accuracy (Fig 2.5.2)				curacy	
Running parallelism of Linear Guide Block surface D with respect to surface B	Δ D, TR	Rail Le	ngth and (Fig 2.5.		Accuracy	Δ D, 1	FR Rail L	ength and. (Fig 2.5	l Running Ac i.2)	curacy	

2-6 Determining the Magnitude of a Preload

What's Preload

Using larger rolling elements helps strengthen the entire rigidity of the block while there exists clearance within ball circulation.

Increasing preload would decrease the vibration and reduce the corrosion caused by running back and forth. However, it would also add the workload within those rolling elements. The greater the preload is, the greater the inner workload is. Therefore, choosing preload has to consider the effect carefully between vibration and preload.

Table 2.6.1 Preload Grade		C : Dynamic load rating		
Grade	Symbol	Preload Force		
Slight Clearance	ZF	0		
No Preload	ZO	0		
Light Preload	Z1	0.02C		
Medium Preload	Z2	0.05C		
Heavy Preload	Z3	0.07C		

Unit : µm

Preload Model No.	ZF	ZO	Z1	Z2	Z3
TR15	5~12	-4~4	-12~-5	-20~-13	-28~-21
TR20	6~14	-5~5	-14~-6	-23~-15	-32~-24
TR25	7~16	-6~6	-16~-7	-26~-17	-36~-27
TR30	8~18	-7~7	-18~-8	-29~-19	-40~-30
TR35	9~20	-8~8	-20~-9	-32~-21	-44~-33
TR45	10~22	-9~9	-22~-10	-35~-23	-48~-36
TR55	11~24	-10~10	-24~-11	-38~-25	-52~-39
TR65	12~26	-11~11	-26~-12	-41~-27	-56~-42

Table 2.0.5 The Difference between interchageability and Non-Interchageability								
		Non	Interchangeable					
Slight Clearance	UP	SP	N					
Preload	Z1 Z2 Z3	Z1 Z2 Z3	Z0 Z1 Z2 Z3	Z0 Z1 Z2 Z3	ZF Z0 Z1 Z2	ZF Z0 Z1		

Table 2.6.3 The Difference between Interchageability and Non-Interchageability

■ 2-7 Mounting Location of Grease Nipples

The standard location of the grease nipple is at both ends of the block, but the nipple can be mounted at each side of block. For lateral installation, we recommend that the nipple be mounted at the non-reference side, otherwise please contact us. It is possible to perform lubrication by using the oil-piping joint.



Fig 2.7.1 Mounting Location

 Table 2.7.1
 The Lubricant Amount for a Block Filled
 Table 2.7.2
 Oil Refilling Rate

 with Grease

Size	Grease (c.c.)	Size	Oil refilling rate (cm ² /hr)
TR15	1.3	TR15	0.2
TR20	2.5	TR20	0.2
TR25	2.5	TR25	0.3
TR30	7	TR30	0.3
TR35	9	TR35	0.3
TR45	15.2	TR45	0.4
TR55	40	TR55	0.5
TR65	75	TR65	0.6

2-8 Grease Nipples

Table 2.8.1 Grease Nipples Model Grease Nipple Code Accessory Code XN, XNC, UN SD-020 M4X0.7P SD-024 SU, ZN **TR15** A SD-066 SZ Linear Guide WW, WU, WZ, DU, DZ SD-021 XN, XNC, UN SU SD-025 M6X1P **TR20 TR25** SZ SD-026 **TR30** SD-075 ΖN WW, WU, WZ, DU, DZ XN, UN SD-021 SU, ZN SD-026 **TR35** SZ SD-060 WW, WU, WZ, DU, DZ _ XN, XNC, UN SD-011 SZ, ZN SD-027 **TR45** SU SD-068 PT1/8 WW, WU, WZ, DU, DZ _ XN, XNC, UN SD-011 SZ, ZN SD-059 **TR55** SU SD-068

WW, WU, WZ

XN, XNC, UN

SU


SZ, ZN

WW, WU, WZ

SD-011

SD-059

SD-058



Size

M4X0.7P

TR65

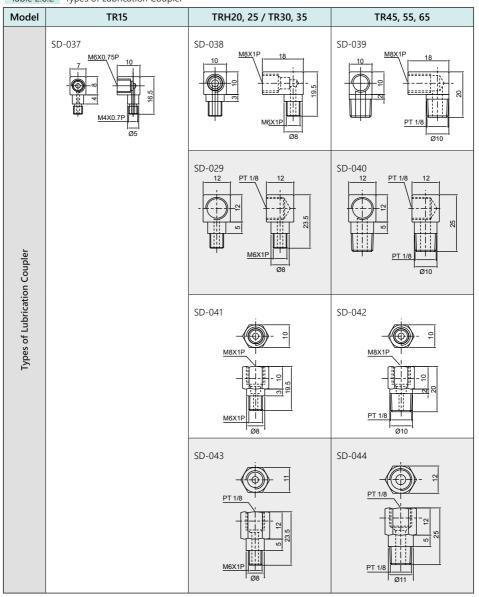


Table 2.8.2 Types of Lubrication Coupler



A Linear Guide

2-9 Strong Dust-proof/Self-Lubricating Linear Guide Series Accessory

TBI MOTION Linear Guide with Double-lip End Seal

Characteristics of TBI MOTION Dust-proof End Seal


- 1. Seal Function : Seal design from single-lip to double-lip is to prevent more dust from going into the block.
- 2. Hardness : Heat treatment harden the end seal to absorb impact while operating.
- 3. Environment : Better solution for dust-proof when using double seals in environment with high contamination.
- 4. Lifetime Extension : Double-lip seal prevents dust go into the block and provides a solution for block damage due to dust issue.

Characteristics of TBI MOTION Metal Scraper

The scraper decreases the possibility of high temperature iron chip or dust entering the block.


Characteristics of TBI MOTION Self-Lubricating Linear Guide Series

There is a Felt accessory between end cap and seals. Felt with oil lubricates the rail when operating and grease nipple is not needed. The design is shown below. (Fig 2.9.1)



Example

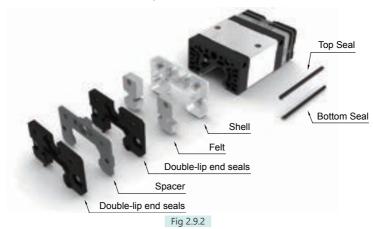WZ (Top Seal+Bottom Seal+Two Double-lip end seals+Felt)



A


Life Comparison


As shown in the chart, the lifetime of self-lubricating blocks is twice as long as standard series blocks.

Table 2.9.1	Test
-------------	------

	Control Group	Experiment Group
Test Environment	Standard	Self-Lubricating
Model No.	TRH20VN	TRH20VN
Load Rating	1000 kg	1000 kg
Speed	6 m/min	6 m/min
Travel Length	600 mm	600 mm

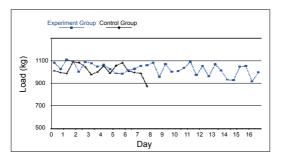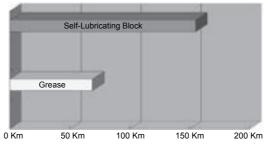* No extra grease is added during the test for both standard series and self-lubricating series.





2-9 Strong Dust-proof/Self-Lubricating Linear Guide Series Accessory

Instructions of Self-Lubricating Block Felt

The felt has already filled in with lubricant. It is suggested to soak the whole felt in the oil tank for more than 8 hours before using.

Characteristics of Suggested Oil :

- (1) Form a strong oil film.
- (2) Reduce wear as much as possible.
- (3) Have high wear resistance.
- (4) Have high thermal stability.
- (5) Be noncorrosive.
- (6) Be highly rust-preventive.
- (7) Be free from dust and some moisture.

Characteristics of Block Felt

- (1) Easy Assembly and Removal Only screws are needed when assembling and disassembling the accessory.
- (2) Environmental Friendly No need of grease nipple and other equipment to save energy.
- (3) Low Maintenance Prevents oil leaking, making it a ideal solution for clean working environments.
- (4) Strong Dust-Proof With dust-proof accessory, service life is extended.

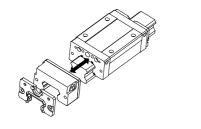
The Suggested Operating Temperature

The suggested operating temperature is between -10°C to 60°C. If operating temperature is over suggested criteria, please contact TBI MOTION.

A

Self-Lubricating Linear Guide Oil Cassette Units

Self lubrication system is designed with lubrication mechanism between end cap and wiper. The structure units are shown as follow. The Cassette unit is comprised with fluid channel which is soaked with oil and act to release the lubricants thoroughly during operation. With this smart and simple design, the linear guide can be lubricated without extra oil feeding units thus minimize unnecessary parts and waste which triggers higher cost and higher risk in mounting error.



Cil Reservoir Fluid Channel

Fig 2.9.3 Installation Method

Fig 2.9.4 Cassette Unit

Characteristics of Self-Lubricating Units

- (1) No extra oil feeding unit is required.
- (2) Applicable in highly required clean envirionment.
- (3) May maintain lubrication for a period of time.
- (4) Lubricates thoroughly in any operating positions.
- (5) Interchangeable to any grease/oil.
- (6) Improves dust-proof effienciency when assembled to the block.

Applications

- (1) Machine Tool
- (2) Industrial Automation : Plastic and rubber manufacturers, Typography, Paper, Textiles, Food.
- (3) Electronic and Component manufacturing : Semiconductor, X-Y Platform, Measurement, Equipment
- (4) Others : Medical Equipment, Conveyers

2-9 Strong Dust-proof/Self-Lubricating Linear Guide Series Accessory

Characteristics of Lubrication Oil

The Self lubrication cassette is filled in with Synthetic Hydro Carbon oil (SHC). The performance of the oil is list as follows :

- (1) Solvent refined oil without wax and impurity.
- (2) High grade of consistency in extreme temperature.
- (3) Corrosion free to metal and high polymer.
- (4) Unique woven texture provides oil film on the contact point to prevent wear.
- (5) High chemical stability and durability.

If the following accessories are needed, please add the code followed by the model number.

Special Option : Steel end seal, Steel end cap, Cover Strip, please contact TBI Motion.

Standard Accessories :

End seal and Bottom seal

To prevent life reduction caused by iron chips or dust entering the block.

Other Accessories :

Top Seal Efficiently prevents dust from the surface of rail or tapping hole getting inside the block.

Double end seal

Enhances the wiping effect, foreign matter can be completely wiped off.

Double-lip end seals Double-lip end seal is suitable for environment with high contamination.

Characteristics of TBI MOTION Metal Scraper


The scraper decreases the possibility of high temperature iron chip or dust entering the block.

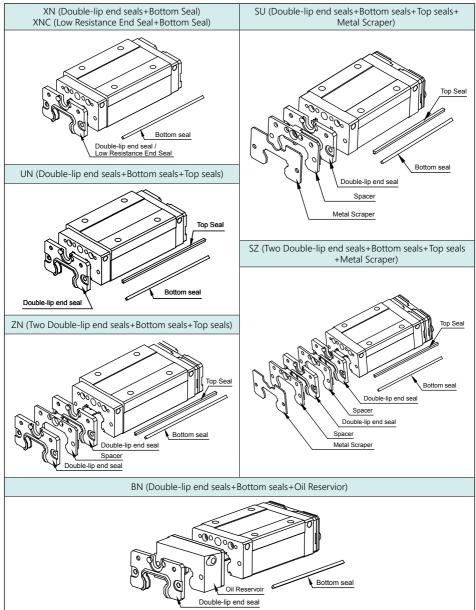
Felt

Double-lip end seal is suitable for environment with high contamination. Felt lubricates the ball track of the rail extending the lifetime. This accessory is suitable for light rating load environment.

Oil Reservoir

After installation, oil reservoir can extend lubricating effect.





*After selection of different accessories increase the overall length of the slider, see table 2.10.2.

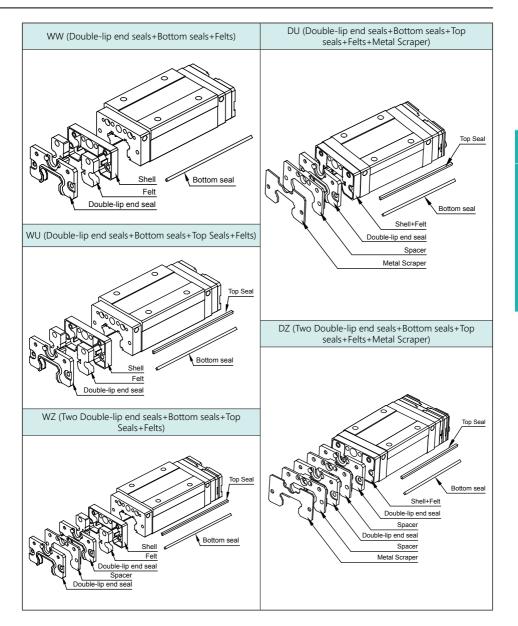


Table 2.10.2 TR Ty	pe Block Le							Unit : mm	
Two Double-lip end seals (ZN)									
Type Length of Block Code	TR15	TR20	TR25	TR30	TR35	TR45	TR55	TR65	
S	47.9	58.4	65.6	76.4	-	-	-	-	
Ν	64.5	TRS (77.3) TRH (84.6)	89.4	105.3	118	134.5	-	-	
L	73	-	-	-	-	150	173	207.9	
E	-	108.6	118.4	141	162	184	211.1	267.4	
		Low	Resistanc	e end seal	(XNC)				
Type Length of Block Code	TR15	TR20	TR25	TR30	TR35	TR45	TR55	TR65	
S	39.3	47.8	56.2	65.8	-	-	-	-	
Ν	55.9	66.7(TRS) 74(TRH)	80	94.7	107.4	121.9	-	-	
L	64.4	-	-	-	-	137.4	158.4	193.3	
E	-	98	109	130.4	151.4	171.4	196.5	252.8	
		Double-l	ip end sea	ls+Metal S	craper (SU))			
Type Length of Block Code	TR15	TR20	TR25	TR30	TR35	TR45	TR55	TR65	
S	44.5	54.4	62.2	72.4	-	-	-	-	
Ν	61.1	TRS (73.3) TRH (80.6)	86	101.3	114	129.5	-	-	
L	69.6	-	-	-	-	145	167	201.9	
E	-	104.6	115	137	158	179	205.1	261.4	
		Two Double	e-lip end s	eals+Meta	l Scraper (S	5Z)			
Type Length of Block Code	TR15	TR20	TR25	TR30	TR35	TR45	TR55	TR65	
S	52.1	63.4	70.6	81.4	-	-	-	-	
N	68.7	TRS (82.3) TRH (89.6)	94.4	110.3	123	139.5	-	-	
L	77.2	-	-	-	-	155	178	212.9	
E	-	113.6	123.4	146	167	189	216.1	272.4	
		Double-	lip end sea	ls+Oil Rese	ervoir (BN)				
Length Type	TR15	TR20	TR25	TR30	TR35	TR45	TR55	TR65	

Type Length of Block Code	TR15	TR20	TR25	TR30	TR35	TR45	TR55	TR65
S	55.8	66.4	73.2	83.4	-	-	-	-
Ν	72.4	TRS (85.3) TRH (92.6)	97	112.3	125	144	-	-
L	80.9	-	-	-	-	159.5	-	-
E	-	116.6	126	148	169	193.5	-	-

Table 2.10.2	TR Type Block Length of Accessories
--------------	-------------------------------------

Double-lip end seals+Felt (WW, WU)									
Type Length of Block Code	TR15	TR20	TR25	TR30	TR35	TR45	TR55	TR65	
S	51.8	60.9	68.7	78.9	-	-	-	-	
N	68.4	TRS (79.8) TRH (87.1)	92.5	107.8	120.5	136	-	-	
L	76.9	-	-	-	-	151.5	-	-	
E	-	111.1	121.5	143.5	164.5	185.5	-	-	

	Two Double-lip end seals+Felt (WZ)									
Type Length of Block Code	TR15	TR20	TR25	TR30	TR35	TR45	TR55	TR65		
S	59.4	69.9	77.1	87.9	-	-	-	-		
Ν	76	TRS (88.8) TRH (96.1)	100.9	116.8	129.5	146	-	-		
L	84.5	-	-	-	-	161.5	-	-		
E	-	120.1	129.9	152.5	173.5	195.5	-	-		

	Double-lip end seals+Felt+Metal Scraper (DU)									
Type Length of Block Code	TR15	TR20	TR25	TR30	TR35	TR45	TR55	TR65		
S	56	65.9	73.7	83.9	-	-	-	-		
N	72.6	TRS (84.8) TRH (92.1)	97.5	112.8	125.5	141	-	-		
L	81.1	-	-	-	-	156.5	-	-		
E	-	116.1	126.5	148.5	169.5	190.5	-	-		

	Two Double-lip end seals+Felt+Metal Scraper (DZ)									
Type Length of Block Code	TR15	TR20	TR25	TR30	TR35	TR45	TR55	TR65		
S	63.6	74.9	82.1	92.9	-	-	-	-		
Ν	80.2	TRS (93.8) TRH (101.1)	105.9	121.8	134.5	151	-	-		
L	88.7	-	-	-	-	166.5	-	-		
E	-	125.1	134.9	157.5	178.5	200.5	-	-		

Unit : mm

Dust-proof Rails

Once the Linear Guide is operating in a cutting machine, dust and foreign matter that enter the Linear Guide may cause abnormal wear and shorten the service life.

Linear Guide rail mounting-hole cap

Chips and foreign matter clogging the mounting holes of a Linear Guide rail may enter the Linear Guide block. To prevent this situation, the mounting holes must be closed with dedicated caps, which must be installed to flush with the Linear Guide rail top surface. To insert a dedicated cap into a mounting hole, drive the cap in using a plastic hammer with a flat metal pad placed over the cap until it matches with the Linear Guide rail top surface. (Fig 2.10.1)

Rail with tapped holes

Fixing a rail with tapped hole is different from fixing a standard one. A major strength of it is the shape of the tapped hole ; dust and chippings would not enter. (Fig 2.10.1)




Fig 2.10.1- Dust-proof

■ 2-11 Friction

The figure showed in the chart is the maximum friction. (Table 2.11.1)

Table 2.11.1 End Cap friction rate

Unit : kaf

Model No.	Double-lip end seals XN	Low Resistance End Seal XNC		
	End Cap friction rate (Max)(Kgf)	End Cap friction rate (Max)(Kgf)		
TR15	0.3	0.18		
TR20	0.4	0.25		
TR25	0.6	0.34		
TR30	0.8	0.45		
TR35	1.7	-		
TR45	2.3	-		
TR55	2.5	-		
TR65	4.1	-		

2-12 Mounting-Surface Dimensional Tolerance

Table 2.12.1

TR series Linear Guide is a Four-Way Equal-Load design, a slight dimensional error in the mounting surface can be absorbed by the self-adjusting capability, thus ensuring smooth linear motion. In the table below are the dimensional tolerances for the mounting surface of TR Linear Guide.




Fig 2.12.1

- <u></u> -	

2	;) =	۲¢۲	 }	0
		L L L		500

0πτ. μπ	Unit	:	μm
---------	------	---	----

A

Linear Guide


Model No.	Tolerance for Parallelism Between Two Axis(e1)					Tolerance for Parallelism Between Two Axis(e2)				
	Z3	Z2	Z1	Z0	ZF	Z3	Z2	Z1	Z0	ZF
TR15	-	-	18	25	35	-	-	85	130	190
TR20	-	18	20	25	35	-	50	85	130	190
TR25	15	20	22	30	42	60	70	85	130	195
TR30	20	27	30	40	55	80	90	110	170	250
TR35	22	30	35	50	68	100	120	150	210	290
TR45	25	35	40	60	85	110	140	170	250	350
TR55	34	45	50	70	98	130	170	210	300	410
TR65	42	55	60	80	105	150	200	250	350	460

3-1 TH Miniature Linear Guide

■ 3-1-1 The Characteristics of TH Series

Dust-Proof Design

TH Series Standard end seals provide extreme protection from dust, metal scrapers to maintain long service life and shorten maintenance period. Unique low friction seal lips provide best smoothness and lower friction.



High Loading and Moment Capacity Performance

TH Miniature Linear Guide series uses two row circulation with Gothic 45° contact angle on the rail groove to achieve equal load capacity in four directions. Larger steel balls are used to enhance the loading and torsion resistance performance in limited space.




Fig 3.1.2 The Gothic 45° four-direction load structure

■ 3-1-2 The Structure of TH-series

Recirculation system : End cap + Recirculation tube + Ball retainer Sealing system : Side + Bottom system

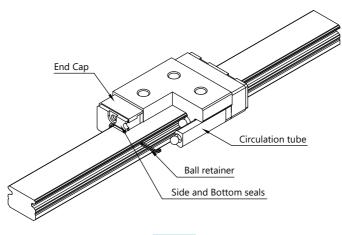


Fig 3.1.3

■ 3-1-3 Accuracy

Miniature Linear Guide TH-series provides P, H, N three accuracy grades for customer to choose.

Table 3.1.1

// P	Accuracy (µm)		Precision P	High H	Normal N
	Tolerance of Height H	Н	±10	±20	±40
T COO	Variation of height with different block on same spot of the rail	∆н	7	15	25
	Tolerance of width W2	W2	±15	±25	±40
// P W2	Variation with width on different block on same spot of the rail	∆ W2	10	20	30

3-1 TH Miniature Linear Guide

Speed

The maximum acceleration of TH-series can reach V_{max} > 5 m/s, α_{max} = 300 m/s² (60 m/s² without preload).

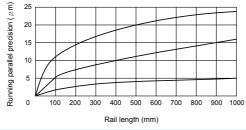


Fig 3.1.4 Running parallel precision slide relative to the rails datum

3-1-4 Preload

Preload Value

Miniature Linear Guide TH-series offers three preloading level, ZF, ZO, Z1. A proper preload enhances performance on rigidity, precision, and torsion resistance; However, an improper preload shorten service life and increase friction.

Table 3.1.2 Table

Preload		Preload(µm)				
Grade	Pressure	7	9	12	15	Applications
ZF	Slight Clearance	+4~0	+4~0	+5~0	+6~0	Running smoothly
ZO	Zero Preload	+2~0	+2~0	+2~0	+3~0	Precision applications, Running smoothly
Z1	Light Preload	0~-3	0~-4	0~-5	0~-6	High steel, Precision applications, Running smoothly

Permissible Operational Temperature

The Miniature Linear Guide TH-series is sufficient to operate between $-20^{\circ}C \sim +80^{\circ}C$. For sudden temperature rise the temperature can reach up to $+100^{\circ}C$.

A Linear Guide

■ 3-1-5 Types of Lubrication

Grease

When a linear guide is well lubricated, the contact point between rail and rolling steel balls will be separated by 1 micro meter. Therefore, a good lubrication increases the service life of linear guide.

Clean room Lubrication

Suitable for low contamination environment.

Lubrication

Table 3.1.3


General usage, ISO VG32~68.

% If Special oil is required please contact TBI MOTION.

Model Lubrication amount (cc) TH07NN 0.3 TH07NL 0.4 TH09NN 0.4 TH09NL 0.6 TH12NN 0.9 TH12NI 1.3 TH15NN 1.4 TH15NL 2.0

■ 3-1-6 Order Information

Customized Requirement :



Rail Length	Dimension						
	TH7	TH9	TH12	TH15			
Pitch (mm)	15	20	25	40			
Wide Pitch (mm)	-	30	40	40			
L2, L3 min	3	4	4	4			
L2, L3 max	10	20	20	35			
Lmax	1300	1300	1300	1300			

% If special dimension is required please contact TBI MOTION.

Table 3.1.4



3-1 TH Miniature Linear Guide

Height of Shoulder on Mounting Surface and Chamfering

Height of shoulder should be taken into consideration when installing a Linear Guide, if the block or rail is over-chamfered, the tip part has the possibility to effect the accuracy of Linear Guide, or if the height of shoulder is too high, it interferes the operation of block. Install the Linear Guide as suggested, the accuracy of Linear Guide can be maintained.

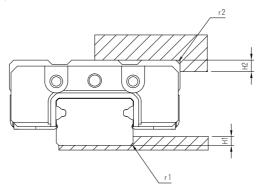


Table 3.1.5 Height of shoulder and chamfer

Model No.	Corner Radius of Mounting Surface r1	Corner Radius of Mounting Surface r2	Shoulder height on rail side H1	Shoulder height on rail side H2
TH07N	0.3	0.2	1	3
TH09N	0.3	0.3	1.7	3
TH12N	0.5	0.4	2.5	4
TH15N	0.5	0.5	2.5	5

Table 3.1.6 Condition with Hexagonal Head Bolt

Model No.	Screw No.	Fasten Torque					
Model No.		Steel	Casting	Aluminum Alloy			
TH07N	M2	57	39.2	29.4			
TH09N	M3	186	127	98			
TH12N	M3	186	127	98			
TH15N	M3	186	127	98			

■ 3-1-7 Nominal Model Code for Non-Interchangeable TH Type

Length of Block

Perform joint treatment when required lengths exceed 1300. Please contact TBI MOTION for detailed information.

Т	Н	07	Ν	L	S	- 2	-	-	1000	- N	S	- Z0	- II	- X
U	(2)	3	(4)	(5)	6	(7)	(8)		9	10	Û	12	13	(14)

1	2	3	4
Nominal Model	Block Type	Dimension	Width of Rail
Т	H : Mini	07, 09, 12, 15	N : Standard
	X : Special		
	(Drawing will be provided for special item in		

order to distinguish the height of the rail.)

(5)	6	$\overline{\mathcal{O}}$
Length of Block	Material of Block	Quantity of Block
N : Standard	S : Stainless steel	(Mark 1 when there is only 1 runner block)
L : Long		

8	9	10	0
Accessory Code	Length of Rail	Accuracy Grade	Material of Rail
□ : Standard (End seal + Side seal)	Unit : mm	N : Normal	S : Stainless steel
NW : Self-Lubricating		H : High	
(Please refer to page A100)		P : Precision	


12	(3)	14
Preload	Two Sets per Axis	Rail Special Machining
ZF : Slight Clearance	(No need to be marked when there is	: Mounting from Top
Z0 : No Preload	only one rail) ${ m II}$	X : Rail with Special Machining
Z1 : Light Preload		

 $\ensuremath{\textup{\%}}\xspace{\ensuremath{\textup{No}}\xspace}$ symbol required when no plating is need.

3-1 TH Miniature Linear Guide

■ 3-1-8 Nominal Model Code for Interchangeable TH Type

Interchangeable Type of Block :



1	2	3	4
Nominal Model	Block Type	Dimension	Width of Rail
Т	H : Mini	07, 09, 12, 15	N : Standard
	X : Special		
	(Drawing will be provided for special item in		

order to distinguish the height of the rail.)

5	6	7	8
Length of Block	Accessory Code	Accuracy Grade	Preload
N : Standard	□ : Standard (End seal + Side seal)	N : Normal	ZF : Slight Clearance
L : Long	NW : Self-Lubricating		Z0 : No Preload

Interchangeable Type of Rail :


Т	Н	07	Ν	-	1000	-	Ν	-	Χ
1	2	3	(4)		5		6		7

1	2	3	4
Nominal Model	Block Type	Dimension	Width of Rail
Т	H : Mini	07, 09, 12, 15	N : Standard
	(Drawing will be provided for special item in		


(Drawing will be provided for special item in order to distinguish the height of the rail.)

5	6	\bigcirc
Length of Rail	Accuracy Grade	Rail Special Machining
Unit : mm	N : Normal	: Mounting from Top
		X : Rail with Special Machining

TH-N Series Specifications



Model No.	bly	Block(mm)						Rail(mm)										
	Н	W2	Ε	w	В	S	J	т	L	L1	Qxℓ	Ø	W1	H1	ØD	h	Ød	F
TH07NN	8	5	1.2	17	12	1.6	8	2.95	23.1	12.3	M2×2.1	1.2	7	4.7	4.1	2.3	2.4	15
TH07NL	8	5	1.2	17	12	1.6	13	2.95	31.1	20.3	M2×2.1	1.2	7	4.7	4.1	2.3	2.4	15
TH09NN	10	5.5	1.9	20	15	2.2	10	3.75	30.6	19.2	M3×2.7	1.2	9	5.9	5.9	3.3	3.5	20
TH09NL	10	5.5	1.9	20	15	2.2	16	3.75	40.9	29.5	M3×2.7	1.2	9	5.9	5.9	3.3	3.5	20
TH12NN	13	7.5	2.7	27	20	3	15	4.62	34.4	20.6	M3×3.2	1.3	12	7.5	6	4.5	3.5	25
TH12NL	13	7.5	2.7	27	20	3	20	4.62	46.9	33.1	M3×3.2	1.3	12	7.5	6	4.5	3.5	25
TH15NN	16	8.5	3.7	32	25	3.5	20	6.1	42.8	27	M3×3.5	1.5	15	9.5	6	4.5	3.5	40
TH15NL	16	8.5	3.7	32	25	3.5	25	6.1	59.8	44	M3×3.5	1.5	15	9.5	6	4.5	3.5	40



Mу


M×

	Load Rating			Static Permissible Moment						
Model No.		gf)	Mx	My(kg-mm)		Mz(ko	j-mm)	Block	Rail	
	с	Co	(kg-mm)					(kg)	(kg/m)	
	C		Single Block	Single Block	Double Block	Single Block	Double Block			
TH07NN	144	204	745	232	3,234	232	3,234	0.005	0.21	
TH07NL	220	374	1,367	849	7,261	849	7,261	0.009	0.21	
TH09NN	220	374	1,713	849	7,117	849	7,117	0.013	0.32	
TH09NL	299	579	2,648	2,099	14,174	2,099	14,174	0.020	0.32	
TH12NN	381	536	3,269	1,094	12,391	1,094	12,391	0.024	0.61	
TH12NL	555	919	5,604	3,437	26,857	3,437	26,857	0.039	0.61	
TH15NN	581	834	6,336	2,316	23,096	2,316	23,096	0.048	1	
TH15NL	860	1,459	11,088	7,527	52,908	7,527	52,908	0.080	I	

3-1 TH Miniature Linear Guide

■ 3-1-9 Self-Lubricating Accessory of TH Series

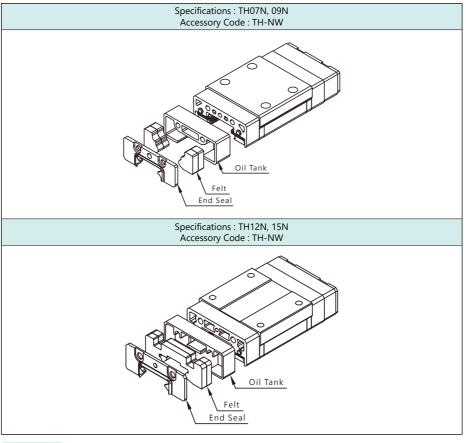Table 3.1.7 Self-Lubricating Accessory Code of TH Series



 ~	 	,	

Type Length of Block Code	TH07	TH09	TH12	TH15
Ν	33.1	40.6	44.4	54.8
L	41.1	50.9	56.9	71.8

4-1 TM Miniature Wide Linear Guide

■ 4-1-1 The Characteristics of TM Series

High Accuracy: The miniature linear guide is manufactured to high precision standards, which enables accurate positioning and motion control.

Excellent Stability: The surfaces of the miniature linear guide undergo specialized treatments that result in a low friction coefficient, ensuring smooth operation and extended service life.

Robust Load Capacity: Despite its compact size, the miniature linear guide features an enhanced load capacity due to material optimization and specialized surface treatments, allowing it to withstand significant forces.

Low Noise: The special surface treatment minimizes friction, ensuring smooth movement and reducing operational noise.

Space Efficiency: The compact design of the miniature linear guide facilitates the use of smaller actuators and motors, effectively saving space while supporting substantial loads.

Easy Maintenance: The simple design of the miniature linear guide makes maintenance convenient and improves the efficiency of the replacement and cleaning processes.

High Accuracy

Customized high-accuracy machining equipment and processes are utilized to manufacture linear guides with an accuracy of ±1µm/1000mm.

Interchangeability

Precision control of machining tolerances allows for interchangeability of reint and blocks across different batches, significantly reducing inventory pressure.

High Speed

Extremely low surface roughness provides a smooth rolling track, contributing to high durability and enabling exceptional smoothness and speed.

High Rigidity

The use of large steel balls enhances circulation smoothness, increasing rigidity and torque while extending service life.

4-1 TM Miniature Wide Linear Guide

■ 4-1-2 Selection Process

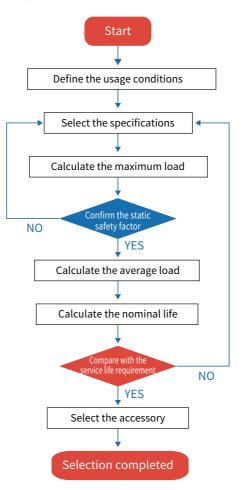
Please note the following information regarding usage requirements:

A. Combination Methods (span dimensions, number of blocks, number of rails)

B. Installation Directions (horizontal, vertical, tilted, wall-mounted)

C. Load Requirements (magnitude, direction, point of application; confirm if it includes fictitious forces)

D. Usage Frequency (load cycle)



A-1 Span Dimensions:

Relative position of the blocks (as shown in Fig 4.1.1):

L0: Distance between blocks on the same rail

L1: Distance between dual rails

A-2. Number of blocks: Increasing the number of blocks enhances load capacity, rigidity, and service life, but shortens the available travel space.

A-3. Number of rails: Using dual rails can improve the MR capability for the system.

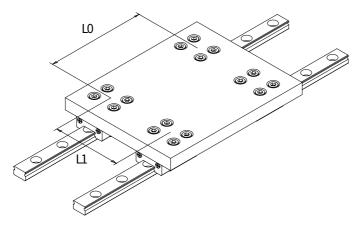


Fig 4.1.1 Span Dimensions

4-1 TM Miniature Wide Linear Guide

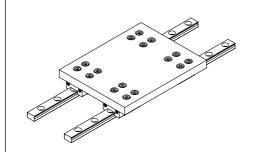
B. Installation Directions

Choosing the ideal installation type can significantly reduce the impact of load moments on the linear motion system. Generally, the rail and block assembly methods can be categorized into the following types:

- 1. Horizontal Position
- 2. Wall-Mounted Position
- 3. Vertical Position
- 4. Other Methods (such as tilted position, inverted position)


Horizontal Position

The most commonly used assembly method is the horizontal position, which better withstands vertical loads and is frequently employed in general positioning and feeding machines.




Vertical Position

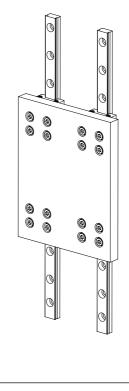Typically used in lifting mechanisms. Attention should be paid to the gravitational load when extending the plate length. Increasing the distance between blocks on the same rail can enhance load distribution.



Wall-Mounted Position

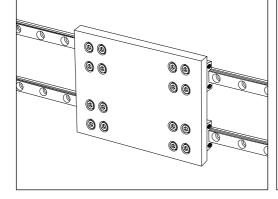
It is important to consider the reactive moment caused by gravity when selecting this method. Increasing the distance between the rails can enhance load distribution.



C. Load Requirements

Definition of a load requires three key elements:

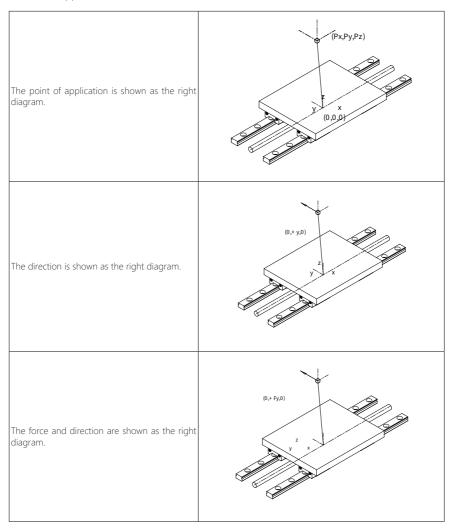- 1. Magnitude
- 2. Direction
- 3. Point of application




4-1 TM Miniature Wide Linear Guide

D. Velocity

V_{max}: Maximum speed during the process

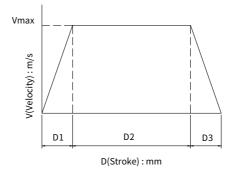D: Length of the travel (D1, D2, D3 are the distances for acceleration, constant speed and deceleration.)



Statistics on the usage of the mechanism within a unit of time help to evaluate whether the system meets actual demands.

Example:

There is a machine that operates 100 km daily with a service life requirement of three years and 300 working days per year.

Required service life: 3 years

Usage Frequency: 100 km/day

The required lifespan is calculated as follows:

3 years × 300 days/year × 100 km/day = 90,000 km

A

Linear Guide

4-1-3 Load and Service Life

During load movements on linear guides, the rolling elements and rolling surfaces experience compressive force and corresponding tensile force. When these forces are applied repeatedly over a certain number of cycles and distance, fatigue damage may occur in the rolling surfaces or rolling elements. This results in metal flakes resembling fish scales, referred to as metal flaking. When this happens, the system cannot maintain accuracy anymore, which means the product's lifespan has ended.

Below are explanations of the key parameters:



Nominal Life (km)


Linear guides are mass-produced The load value that causes a The same specifications for each products. Even under the same permanent deformation of 0.0001 batch of linear guides with individual conditions, they may not have the times the diameter of the rolling operational tests which are conducted same service life. The nominal life is elements and the rolling surfaces, under consistent conditions, where the defined as the operation of a batch under constant direction and load and direction remain unchanged. of linear guides under the same magnitude. This is used to calculate In this context, 90% of the products in conditions, where 90% of the products the static safety factor for the linear the batch demonstrate a nominal life in the same batch meet the standard guide. and do not experience the metal flaking over a specified total travel distance.

Basic Static Load Rating (N)

Basic Dynamic Load Rating (N)

corresponding to a load value of 50 km.

M_x, M_y, M_z Permissible Moment (N-m):



The total moment value causes a permanent deformation of 0.0001 times the diameter of the rolling elements and the rolling surfaces, under constant direction and magnitude. Define M_x, M_y, and M_z in three axes when calculating the static safety factor.

4-1 TM Miniature Wide Linear Guide

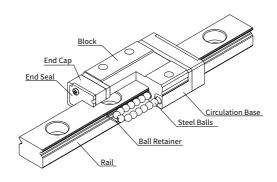


Fig 4.1.2 Structure of TM

fs : Static Safety Factor

It is the ratio of the load capacity of linear guides (basic static load rating) and the maximum calculated load.

The formula is as follows:

$$f_{s}= \frac{f_{C} \cdot C_{0}}{P} \qquad \qquad f_{s}= \frac{f_{C} \cdot M_{0}}{M}$$

- fs: Static Safety Factor
- Co: Basic Static Load Rating
- Mo: Static Permissible Moment
- P : Design Load
- M : Design Moment
- fc: Contact Factor

Operating Conditions	Loading Conditions	Minimum fs		
General Static Conditions	Minor impacts and offsets	1.0~1.3		
	Heavy impacts and vibrations	2.0~3.0		
Canaral Matian Canditiana	Minor impacts and twists	1.0~1.5		
General Motion Conditions	Heavy impacts and vibrations	2.5~5.0		

Additional Influence Parameters

Additional influence parameters mainly address variations in usage methods and environmental conditions, allowing for appropriate adjustments to correct calculation errors.

- fc: Contact Factor
- fh: Hardness Factor
- ft: Temperature Factor
- fw: Load Factor


fc: Contact Factor

Contact Factor: When multiple blocks are closely arranged with each other, the load distribution on the steel balls becomes uneven. Therefore, a correction factor needs to be included in the lifespan calculation.

Number of Used Blocks	Contact Factor fc
In normal use	1
2	0.81
3	0.72
4	0.66
5	0.61


fh: Hardness Factor

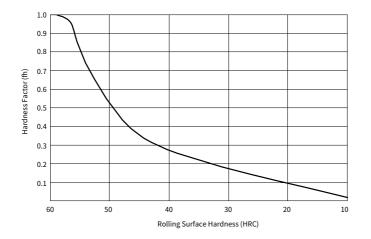Hardness Factor: The hardness for the rolling elements and rolling surfaces of linear guides is between 58~62 HRC. If any conditions lead to a decrease in hardness, a correction factor needs to be included in the lifespan calculation.



ft: Temperature Factor

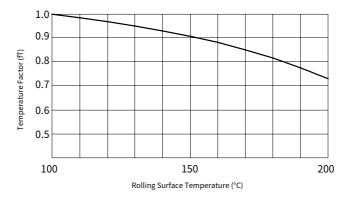Temperature Factor: When rolling surfaces and rolling elements are in high-temperature environments, their lifespan diminishes as the operating temperature increases. If the ambient temperature exceeds the conditions shown in the diagram, it should be considered when evaluating lifespan. For linear guide with plastic components and end seals, it is advisable to keep the operating temperature below 80°C.



f_w: Load Factor

Load Factor: Reciprocating mechanisms can easily generate vibrations or impacts, especially during high-speed operations or frequent starts and stops, which produce inertial shocks. Estimating a reasonable load under these conditions can be quite challenging. Therefore, when the impact of speed vibrations is significant, please refer to the following load coefficients, based on empirical data, and divide them by the basic dynamic load rating (C).

Vibration and Impact	Velocity (V)	Measured Vibration (G)	fw
Very Slight	V≤15m/min	G≤0.5	1~1.5
Slight	15 <v≤60m min<="" td=""><td>0.5<g≤1.0< td=""><td>1.5~2.0</td></g≤1.0<></td></v≤60m>	0.5 <g≤1.0< td=""><td>1.5~2.0</td></g≤1.0<>	1.5~2.0
Strong	V>60m/min	1.0 <g≤2.0< td=""><td>2.0~3.5</td></g≤2.0<>	2.0~3.5

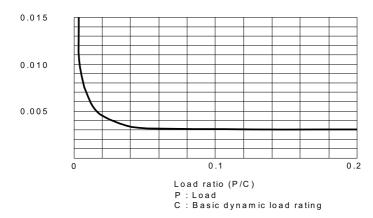
The formula is as follows:

$$L = \left[\frac{f_h \cdot f_t \cdot f_c}{f_w} \cdot \frac{C}{P} \right]^{3} \cdot 50 \, km$$

- C : Basic Dynamic Load Rating
- P : Calculated Load
- fh: Hardness Factor
- ft: Temperature Factor
- fc: Contact Factor
- fw: Load Factor

(The selection process section will provide a more in-depth introduction.)

Friction




Linear guides enable load movement using rolling elements like balls or rollers, resulting in friction that is 1/40th of the one found in traditional sliding systems. The causes of friction include the viscous resistance of lubricants, preload friction resistance, and friction generated by the applied force. The diagram above illustrates the coefficient of friction when the linear guide is subjected to force.

- F=uW+f
- F : Friction
- W : Load
- u : Friction Factor
- f : Friction Resistance from Block Accessory

Load Calculation

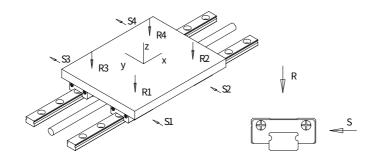The definition of load calculation is shown in the diagram below. The letter "R" represents the radial load on the block, and "S" represents the lateral load on the block, with numbers indicating their positions. The load calculation for the block is as follows:



$$\begin{split} \mathsf{R}_{1} &= \frac{-\mathsf{F}_{z}}{4} + \frac{(\mathsf{F}_{z} \cdot \mathsf{P}_{y} \cdot \mathsf{F}_{y} \cdot \mathsf{P}_{z})}{2 \cdot \mathsf{L}1} - \frac{(\mathsf{F}_{x} \cdot \mathsf{P}_{z} \cdot \mathsf{F}_{z} \cdot \mathsf{P}_{x})}{2 \cdot \mathsf{L}0} \\ \mathsf{R}_{2} &= \frac{-\mathsf{F}_{z}}{4} + \frac{(\mathsf{F}_{z} \cdot \mathsf{P}_{y} \cdot \mathsf{F}_{y} \cdot \mathsf{P}_{z})}{2 \cdot \mathsf{L}1} - \frac{(\mathsf{F}_{x} \cdot \mathsf{P}_{z} \cdot \mathsf{F}_{z} \cdot \mathsf{P}_{x})}{2 \cdot \mathsf{L}0} \\ \mathsf{R}_{3} &= \frac{-\mathsf{F}_{z}}{4} + \frac{(\mathsf{F}_{z} \cdot \mathsf{P}_{y} \cdot \mathsf{F}_{y} \cdot \mathsf{P}_{z})}{2 \cdot \mathsf{L}1} - \frac{(\mathsf{F}_{x} \cdot \mathsf{P}_{z} \cdot \mathsf{F}_{z} \cdot \mathsf{P}_{x})}{2 \cdot \mathsf{L}0} \\ \mathsf{R}_{4} &= \frac{-\mathsf{F}_{z}}{4} + \frac{(\mathsf{F}_{z} \cdot \mathsf{P}_{y} \cdot \mathsf{F}_{y} \cdot \mathsf{P}_{z})}{2 \cdot \mathsf{L}1} - \frac{(\mathsf{F}_{x} \cdot \mathsf{P}_{z} \cdot \mathsf{F}_{z} \cdot \mathsf{P}_{x})}{2 \cdot \mathsf{L}0} \\ \mathsf{S}_{1} &= \frac{-\mathsf{F}_{z}}{4} + \frac{(\mathsf{F}_{y} \cdot \mathsf{P}_{x} \cdot \mathsf{F}_{x} \cdot \mathsf{P}_{y})}{2 \cdot \mathsf{L}0} \\ \mathsf{S}_{2} &= \frac{-\mathsf{F}_{y}}{4} + \frac{(\mathsf{F}_{y} \cdot \mathsf{P}_{x} \cdot \mathsf{F}_{x} \cdot \mathsf{P}_{y})}{2 \cdot \mathsf{L}0} \\ \mathsf{S}_{3} &= \frac{-\mathsf{F}_{y}}{4} + \frac{(\mathsf{F}_{y} \cdot \mathsf{P}_{x} \cdot \mathsf{F}_{x} \cdot \mathsf{P}_{y})}{2 \cdot \mathsf{L}0} \\ \mathsf{S}_{4} &= \frac{-\mathsf{F}_{y}}{4} + \frac{(\mathsf{F}_{y} \cdot \mathsf{P}_{x} \cdot \mathsf{F}_{x} \cdot \mathsf{P}_{y})}{2 \cdot \mathsf{L}0} \end{split}$$

4-1-4 Preload

Preload is crucial to the overall precision performance of the mechanism. The mechanism may experience overall oscillation due to external forces or inertia from accelerations. Below are reference preload levels for various types of machinery.


Preload	Slight Clearance	Zero Clearance	Light Preload
1. Slight impact 1		1. Slight impact	1. Cantilever
2. One-axis usage		2. Two-axes usage in parallel	2. One-axis usage
Operating Conditions	3. High smoothness requirement	3. High smoothness requirement	3. Light load
	4. Slight sliding resistance	4. Low sliding resistance	4. High accuracy
5. Low reciprocating load case		5. Low reciprocating load case	
	1. Conveyor	1. Welding machine	1. NC lathe
2. Fully automatic sewing machine		2. Cutting machine	2. Electrical discharge machine
Application	3. Vending machine	3. Material feeding systems	3. Precision XY table
Examples	4. Laser engraving machine	4. Automatic tool changer	4. Z-axis for general machinery
	5. Banner printing machine	5. XY-axis for general machinery	5. Industrial robotic arm
	6. Screen printing equipment	6. Packing machine	6. PCB drilling machine


Preload and Clearance

When selecting preload, it is important to consider the potential for clearance or additional preload forces. Be sure to assess the impact on precision and lifespan during the selection process. Miniature linear guides are generally not suitable for medium to high preload applications involving heavier loads because of the limitations in its profile and rigidity.

Preload	Mark	Clearance or Preload Force
Slight Clearance	F	4~10µm
No Clearance	0	2µm~0.01C
Light Preload	1	0.01C~0.02C

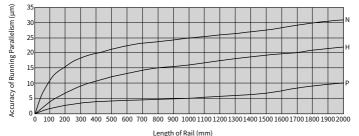Note. The letter "C" in preload force is Dynamic Load Rating.





4-1 TM Miniature Wide Linear Guide

■ 4-1-5 Accuracy

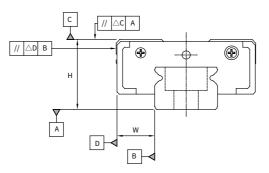


Table 4.1.1 Assembly Accuracy (Non-Interchangeable Type)

Туре	ltem	Accuracy Level		
туре	item	Normal "N"	High "H"	Precision "P"
	Tolerance for Height H		±0.02	±0.01
Tolerance for Width W		±0.04	±0.025	±0.015
07 09			0.015	0.007
			0.02	0.01
	Running parallelism of block surface "C" against surface "A"	C" Running parallelism (Table 4.1.3)		
	Running parallelism of block surface "D" against surface "B"	Running parallelism (Table 4.1.3)		

Flatness of the Mounting Surfaces of the Block and Guide Rail

Due to the Gothic structure of miniature linear guides, any accuracy errors in the mounting surfaces may negatively affect their operation.


Table 4.1.2 Flatness of the Mounting Surfaces of the Block and Guide Rail

Unit: mm

Model No.	Flatness Tolerance
07	0.025/200
09	0.035/200
12	0.050/200
15	0.060/200

Note.1. For installation surfaces, accuracy can be influenced by a combination of factors in different cases. Therefore, it is recommended to use values below 70% of those listed in the table.

Note.2. The values mentioned above apply to slight clearances. When using a zero-clearance two-axes system, it is recommended to use values below 50% of those specified above.



Unit: µm

	Tolerance for Dual-Axis Parallelism Error E1			Tolerance for	Dual-Axis Leve	Iness Error E2
Model No.	Slight Clearance	Slight Clearance Zero Clearance Light Preload		Slight Clearance	Zero Clearance	Light Preload
7	3	3	3	25	25	3
9	4	4	3	35	35	6
12	9	9	5	50	50	12
15	10	10	6	60	60	20

■ 4-1-6 Accuracy Standard

Table 4.1.3 Rail Length for TM Series and Running Parallelism

Rail Length for TM Series		Running Parallelism (µm)		
Above	Below	N	н	Р
	40	8	4	1
40	70	10	4	1
70	100	11	4	2
100	130	12	5	2
130	160	13	6	2
160	190	14	7	2
190	220	15	7	3
220	250	16	8	3
250	2803	17	8	3
280	310	17	9	3
310	340	18	9	3
340	370	18	10	3
370	400	19	10	3
400	430	20	11	4
430	460	20	12	4
460	490	21	12	4
490	520	21	12	4
520	550	22	12	4
550	580	22	13	4
580	610	22	13	4
610	640	22	13	4
640	670	23	13	4
670	700	23	13	5
700	730	23	14	5
730	760	23	14	5
760	790	23	14	5
790	820	23	14	5
820	850	24	14	5
850	880	24	15	5
880	910	24	15	5
910	940	24	15	5
940	970	24	15	5
970	1000	25	16	5
1000	1030	25	16	5

Rail Length for TM Series			ınning Parallelism (μι	m)
Above	Below	Ν	н	Р
1030	1060	25	16	6
1060	1090	25	16	6
1090	1120	25	16	6
1120	1150	25	16	6
1150	1180	26	17	6
1180	1210	26	17	6
1210	1240	26	17	6
1240	1270	26	17	6
1270	1300	26	17	6
1300	1330	26	17	6
1330	1360	27	18	6
1360	1390	27	18	6
1390	1420	27	18	6
1420	1450	27	18	7
1450	1480	27	18	7
1480	1510	27	18	7
1510	1540	28	19	7
1540	1570	28	19	7
1570	1600	28	19	7
1600	1700	29	20	8
1700	1800	30	21	9
1800	1900	30	21	9
1900	2000	31	22	10

4-1 TM Miniature Wide Linear Guide

■ 4-1-7 Mounting Type of Linear Rail

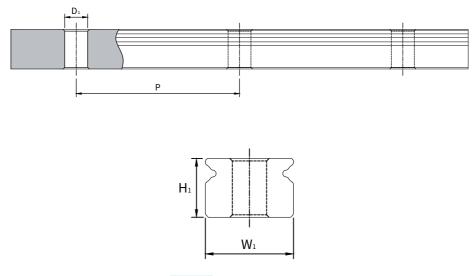


Fig 4.1.3 Mounting from Below

Table 4.1.4 R	ail Size
---------------	----------

Unit: mm


	Rail Size				
Model No.	H1	W1	Р	D1	
TM07W	5.2	14	30	M4*0.7	
TM09W	6.5	18	30	M4*0.7	
TM12W	8.5	24	40	M5*0.8	
TM15W	9.5	42	40	M5*0.8	

■ 4-1-8 Installation

Installation Process

Good installation quality is built on detailed planning during the design phase and the implementation of installation processes. The following are dimensions and design considerations that should be noted in the early design phase, as well as detailed tasks that need to be considered during the installation process.

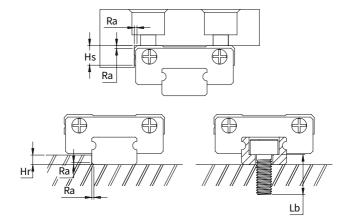Dimensions to Consider in the Design Phase




ltem	Hr	Hs	Ra	Lb
TM07W	1.7	3	0.2	M3×10L
TM09W	2.5	3.2	0.2	M3×10L
TM12W	3.5	4	0.3	M4×12L
TM15W	3.5	4	0.4	M4×14L

Hr : Maximum height of the rail support surface (mm)

- Hs : Recommended height for block support (mm)
- Ra : Maximum fillet radius for the support corner (mm)
- Lb : Recommended specifications for fixed screws

4-1 TM Miniature Wide Linear Guide

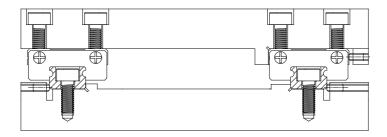Basic Structure



The above image provides a basic introduction to the application of linear guides.

The basic structure is mainly divided into:

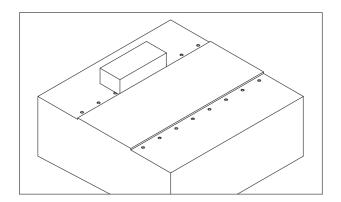
1. Fixed Platform: The above image features a rail mounting surface, with lateral set screws that securely align the rail with the reference surface.

2. Moving Platform: The above image includes a mounting surface for the block, with lateral set screws tightened to ensure the accuracy and stability between the block and the moving platform.

3. Rake Angle Design: Rails and blocks feature basic chamfers to prevent assembly interference. However, to facilitate maintenance, incorporating a rake angle design can also be beneficial.


Step 1.

Basic Preparatory Work: To achieve good installation quality, use a cleaning oil to remove the rustproof oil layer from the reference surface before installation. Additionally, use a honing stone to eliminate any machining burrs or surface defects.




Step 2.

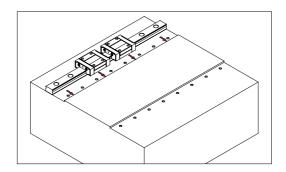Installation Reference Surface Confirmation: Verify the installation orientation of the reference surface for the rail and block to ensure precise positioning accuracy.



Step 3.

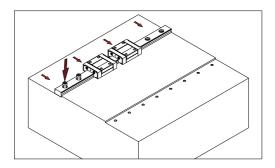Rail Pre-Positioning: Place the rail onto the reference surface, ensuring it rests against the side installation reference surface. Tighten the set screws to maintain clamping force without fully locking them. Follow the specified sequence for tightening screws, ensuring that the rotation direction aligns the linear guide with the holes of the adjacent reference surface. Proceed in sequence to avoid any misalignment.




Step 4.

Selection of Tightening Torque: Please confirm the material of the installation platform and the size of the set screws. Then, select the appropriate tightening torque accordingly.

Model No.		Tightening Torque (kg-cm)	
Woder No.	Steel	Cast Iron	Aluminum
M2	6.3	4.2	3.1
M2.3	8.4	5.7	4.2
M2.6	12.6	8.4	6.3
M3	21	13.6	10.5
M4	44.1	29.3	22
M5	94.5	63	47.2
M6	146.7	98.6	73.5
M8	325.7	215.3	157.5


Step 5.

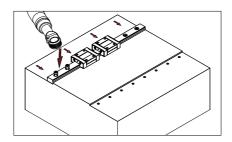Tightening with Torque Wrench: Use a torque wrench to tighten the screws in stages for accurate positioning. This can be done in two or three stages (with a three-stage tightening distribution of 40%, 70%, and 100% of the final torque output).



Step 6.

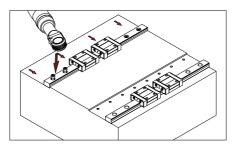Sub-Rail Installation: Follow the same steps as above, paying attention to the torque and the selected order of tightening for the supporting surfaces. Tighten in stages for accurate positioning.



Step 7.

Installation of Moving Platform:

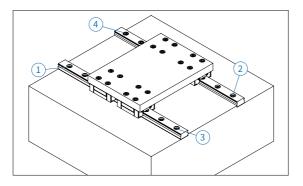
1.Carefully place the moving platform on the assembled block, ensuring that the mounting surface aligns with the lateral clamping position.

2. Tightening can be done in two or three stages (with a three-stage tightening distribution of 40%, 70%, and 100% of the final torque output).

3. Follow a diagonal tightening sequence for the set screws, proceeding in stages as shown in installation step 6.

4. After completing the first stage of tightening at 30%, proceed to apply lateral clamping for the first stage output.

5. After completing the first stage, continue to the next stage, progressing to 100% completion.



■ 4-1-9 Nominal Model Code for TM Series

Length of Rail

If the required length exceeds 1300 mm, it will be assembled using two or more sections. Please contact TBI MOTION for detailed information.

T M O7 W I I	L S - 2	1000 - ③	N S	- ZO	- II -	- K				
1 2		3		4						
Nominal Model Blog	ck Type	Dimens	ion	Width of Ra	ail					
T M:	Miniature	07, 09, 1	2, 15	W: Wide						
X: 5	ipecial									
(Drawing will be provided for special item in order to distinguish the height of the rail.)										
orde		iui.)								
5 6)	(7)								
Length of Block N	laterial of Block	Numb	er of Bloc	k Per Rail						
N: Standard	: Stainless Steel	(Mark	(Mark 1 when there is only 1 block)							
L: Long										
8	9	10		(1)						
Accessory Code	Length of Rail	Accuracy Grad	le	Material o	of Rail					
□ : Standard (End seal + Bottor	n seal) Unit: mm	N: Normal		S: Stainles	s steel					
		H: High								
		P: Precision		_						
(12)	(3)		(14)							
Preload	Two Sets per Axis		Rail Special Machining							
ZF: Slight Clearance	(No need to be marked whe	n there is only one								

X: Rail with Special Machining

□: Mounting from Top

*There is no surface treatment for Miniature Wide Series.

rail) II

Z0: Zero Clearance

Z1: Light Preload

Interchangeable Type of Block:



1)	2	3	(4)
Nominal Model	Block Type	Dimension	Width of Rail
Т	M: Miniature	07, 09, 12, 15	W: Wide
	X: Special		
	(Drawing will be provided for special item in		

(Drawing will be provided for special item in order to distinguish the height of the rail.)

5	6	\bigcirc	(8)
Length of Block	Accuracy Grade	Material of Block	Preload
N: Standard	N: Normal	S: Stainless steel	ZF: Slight Clearance
L: Long	H: High		Z0: Zero Clearance
	P: Precision		Z1: Light Preload

Interchangeable Type of Rail:



1	2	3	(4)
Nominal Model	Block Type	Dimension	Width of Rail
Т	M: Miniature	07, 09, 12, 15	W: Wide
	X: Special		


(Drawing will be provided for special item in order to distinguish the height of the rail.)

5	6	0	8
Length of Rail	Accuracy Grade	Material of Rail	Rail Special Machining
Unit: mm	N: Normal	S: Stainless steel	K: Mounting from Bottom
	H: High		X: Rail with Special Machining
	P: Precision		: Mounting from Top


4-1 TM Miniature Wide Linear Guide

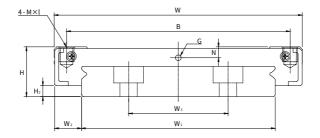TM-W Series Specification





Model No.	Asse	embly (r	nm)	Block Dimension (mm)										
	н	H2	W2	w	L	L1	В	с	M×I	N	G	G1		
TM07WN	9	2	5.5	25	30.6	21	19	10	M3x3	1.8	1.2	-		
TM07WL	9	2	5.5	25	40.4	30.8	19	19	M3x3	1.8	1.2	-		
TM09WN	12	3	6	30	38.7	26.1	21	12	M3x3	2.8	1.2	-		
TM09WL	12	3	6	30	50.5	37.9	23	24	M3x3	2.8	1.2	-		
TM12WN	14	4	8	40	44	29.4	28	15	M3x4	2.85	1.2	-		
TM12WL	14	4	8	40	59	44.4	28	28	M3x4	2.85	1.2	-		
TM15WN	16	4	9	60	54.8	37.8	45	20	M4x4.5	3	M3	4.5		
TM15WL	16	4	9	60	73.8	56.8	45	35	M4x4.5	3	M3	4.5		

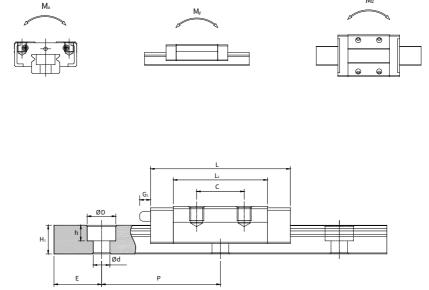

	Rail Dimension (mm)					oad ting	Stati	c Permiss	ible Mom	ent (kg-n	nm)	Weight		
			(k		gf)	М×	N	1 _y	Μ	z	Block	Rail		
W1	W3	H1	Ρ	D×h×d	E	с	С0	Single Block	Single Block	Double Block	Single Block	Double Block	(g)	(kg/m)
14	-	5.2	30	6x3.2x3.5	10	139	209	1601	728	3753	728	3753	0.02	0.52
14	-	5.2	30	6x3.2x3.5	10	180	320	2391	1581	8392	1581	8392	0.029	0.52
18	-	6.5	30	6x3.5x3.5	10	279	368	4093	1935	9514	1935	9514	0.035	0.95
18	-	6.5	30	6x3.5x3.5	10	354	604	5588	3489	18385	3489	18385	0.048	0.95
24	-	8.5	40	8x4.5x4.5	15	402	571	7174	2839	14918	2839	14918	0.06	1.53
24	-	8.5	40	8x4.5x4.5	15	525	847	10493	5864	29806	5864	29806	0.086	1.55
42	23	9.5	40	8x4.5x4.5	15	694	942	20440	5919	31988	5919	31988	0.122	2.0
42	23	9.5	40	8x4.5x4.5	15	918	1375	30642	12634	61937	12634	61937	0.174	2.9

 M_{z}

5-1 Accessory list / Accessory combination list

Table 5.1.1 Accessory list

Туре	Codes of Accessories	XN	XNC	UN	ZN	SU	sz	BN	ww	wu	wz	DU	DZ	тн
	TR15S	0	0	0	0	0	0	0	0	0	0	0	0	-
	TR15N	0	0	0	0	0	0	0	0	0	0	0	0	-
	TR15L	0	0	0	0	0	0	0	0	0	0	0	0	-
	TR20S	0	0	0	0	0	0	0	0	0	0	0	0	-
	TR20N	0	0	0	0	0	0	0	0	0	0	0	0	-
	TR20E	0	0	0	0	0	0	0	0	0	0	0	0	-
	TR25S	0	0	0	0	0	0	0	0	0	0	0	0	-
	TR25N	0	0	0	0	0	0	0	0	0	0	0	0	-
	TR25E	0	0	0	0	0	0	0	0	0	0	0	0	-
	TR30S	0	0	0	0	0	0	0	0	0	0	0	0	-
	TR30N	0	0	0	0	0	0	0	0	0	0	0	0	-
	TR30E	0	0	0	0	0	0	0	0	0	0	0	0	-
	TR35N	0	0	0	0	0	0	0	0	0	0	0	0	-
	TR35E	0	0	0	0	0	0	0	0	0	0	0	0	-
	TR45N	0	0	0	0	0	0	0	0	0	0	0	0	-
	TR45L	0	0	0	0	0	0	0	0	0	0	0	0	-
	TR45E	0	0	0	0	0	0	0	0	0	0	0	0	-
	TR55L	0	0	0	0	0	0	-	-	-	-	-	-	-
	TR55E	0	0	0	0	0	0	-	-	-	-	-	-	-
	TR65L	0	0	0	0	0	0	-	-	-	-	-	-	-
	TR65E	0	0	0	0	0	0	-	-	-	-	-	-	-
	TH07	-	-	-	-	-	-	-	-	-	-	-	-	0
	TH09	-	-	-	-	-	-	-	-	-	-	-	-	0
	TH12	-	-	-	-	-	-	-	-	-	-	-	-	0
	TH15	-	-	-	-	-	-	-	-	-	-	-	-	0

4	
Linear	
Guide	

Table 5.1.2	Accessory combination list

Туре	VAL	VALC		711	C 11	67		1404/	14/11	14/7	БШ	D 7	T 11
Accessories	XN	XNC	UN	ZN	SU	SZ	BN	ww	WU	WZ	DU	DZ	TH
Strong Double-lip end seals	0	-	0	-	0	-	0	0	0	-	0	-	-
Strong Two Double-lip end seals	-	-	-	0	-	0	-	-	-	0	-	0	-
Low Resistance End Seal	-	0	-	-	-	-	-	-	-	-	-	-	0
Spacer	-	-	-	0	0	-	-	-	-	0	0	-	-
Double Spacer	-	-	-	-	-	0	-	-	-	-	-	0	-
Metal Scraper	-	-	-	-	0	0	-	-	-	-	0	0	-
Bottom Seal	0	0	0	0	0	0	0	0	0	0	0	0	0
Top Seal	-	-	0	0	0	0	-	-	0	0	0	0	-
Oil Reservoir	-	-	-	-	-	-	0	-	-	-	-	-	-
Oil Tank	-	-	-	-	-	-	-	0	0	0	0	0	0
Mounting Hole Cap	0	0	0	0	0	0	0	0	0	0	0	0	0
Grease Nipple SD-020	0	0	0	-	-	-	-	-	-	-	-	-	-
Grease Nipple SD-024	-	-	-	0	0	-	-	-	-	-	-	-	-
Grease Nipple SD-066	-	-	-	-	-	0	-	-	-	-	-	-	-
Grease Nipple SD-021	0	0	0	-	-	-	-	-	-	-	-	-	-
Grease Nipple SD-025	-	-	-	-	0	-	-	-	-	-	-	-	-
Grease Nipple SD-026	-	-	-	0	-	0	-	-	-	-	-	-	-
Grease Nipple SD-075	-	-	-	0	-	-	-	-	-	-	-	-	-
Grease Nipple SD-060	-	-	-	-	-	0	-	-	-	-	-	-	-
Grease Nipple SD-011	0	0	0	-	-	-	-	-	-	-	-	-	-
Grease Nipple SD-027	-	-	-	0	-	0	-	-	-	-	-	-	-
Grease Nipple SD-068	-	-	-	-	0	-	-	-	-	-	-	-	-
Grease Nipple SD-059	-	-	-	0	-	0	-	-	-	-	-	-	-
Grease Nipple SD-058	-	-	-	0	-	0	-	-	-	-	-	-	-
Grease Nipple SD-037	0	0	0	-	-	-	-	-	-	-	-	-	-
Grease Nipple SD-038	0	0	0	-	-	-	-	-	-	-	-	-	-
Grease Nipple SD-039	0	0	0	-	-	-	-	-	-	-	-	-	-
Grease Nipple SD-029	0	0	0	-	-	-	-	-	-	-	-	-	-
Grease Nipple SD-040	0	0	0	-	-	-	-	-	-	-	-	-	-
Grease Nipple SD-041	0	0	0	-	-	-	-	-	-	-	-	-	-
Grease Nipple SD-042	0	0	0	-	-	-	-	-	-	-	-	-	-
Grease Nipple SD-043	0	0	0	-	-	-	-	-	-	-	-	-	-
Grease Nipple SD-044	0	0	0	-	-	-	-	-	-	-	-	-	-